

10 STEP QUICK START INSTALLATION GUIDE

How to install the pcProx configuration utility (version 5.2.33) to test and/or configure your reader.

****Please note that you will need Admin rights on your Windows computer to install.***

Step 1: Connect your reader to a Windows PC.


Step 2: Confirm that you have a solid red light on the reader.

Step 3: Download and install the pcProx configuration utility from the rfIDEAS website, found here:

<https://www.rfideas.com/sites/default/files/2020-02/pcProxConfig-5.2.33%20.zip>

Step 4:

Open and extract the pcProxConfig-5.2.33_0.zip file and double click to open the pcProxConfig.exe file to begin the setup installation.

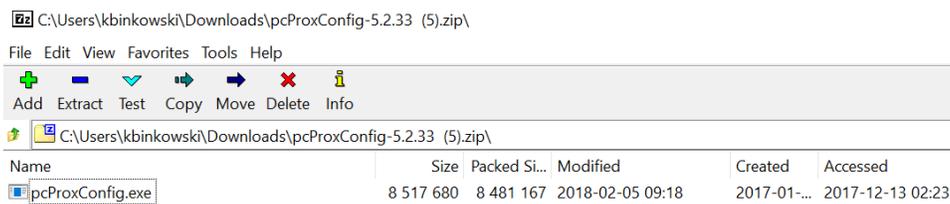


Step 5:

Once extracted, double click on the pcProxConfig.exe to Run. You may see a Windows security screen and you will want to answer **"Run Anyway"** to begin the install for the program. Please see here:




Step 6:

Accept the license agreement and click **Next:**

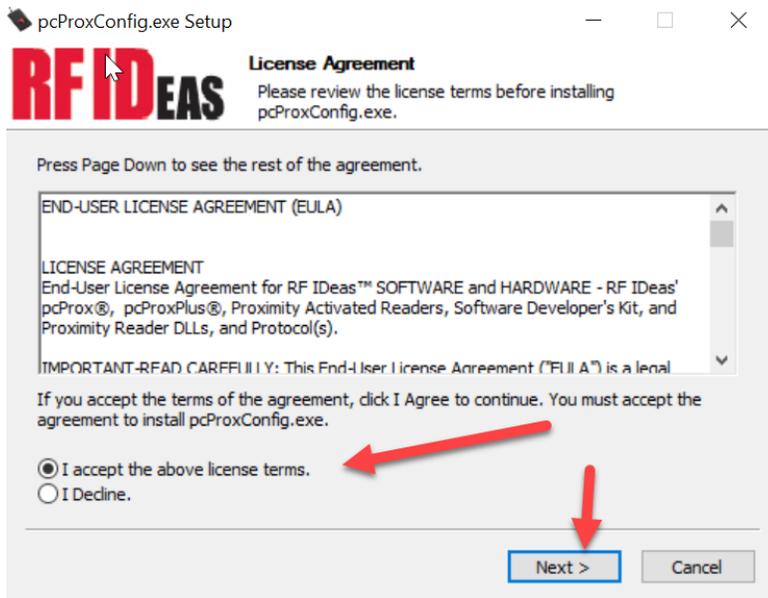


Step 7:

Choose components, click **Next**:

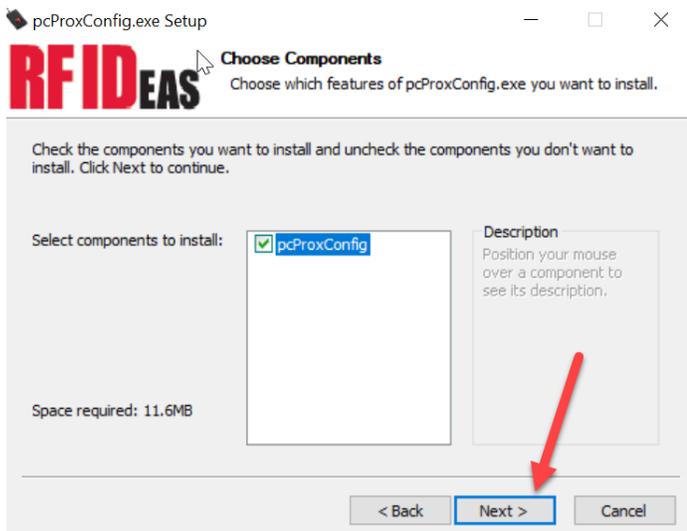


Step 8:

Select location of installation and click **Install**:

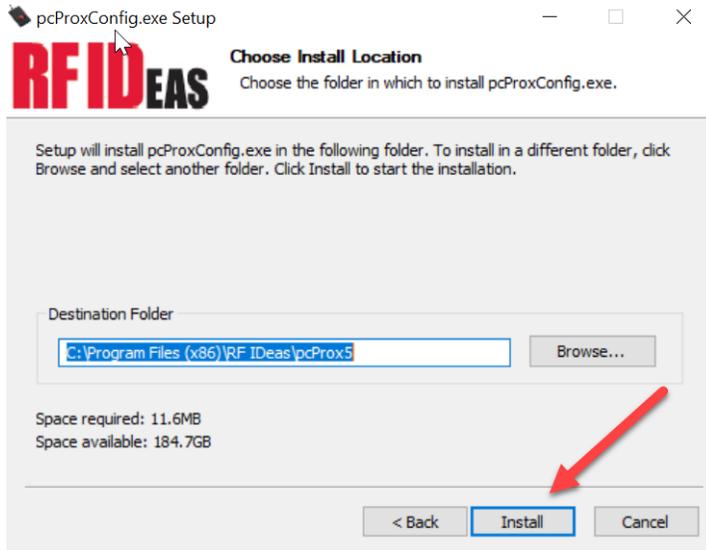

Step 9:

Click **Finish** to complete installation:

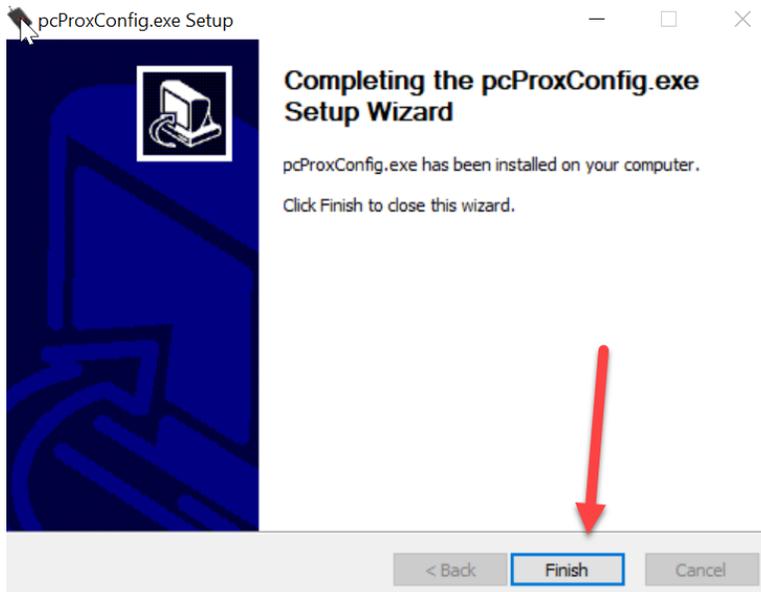

Step 10:

Go to **Start, Programs, RFIDeas folder**, and choose the **pcProxconfig.exe** to launch the program and get started. Please note that utility will attempt to Auto-connect on start up.