

IP67 Installation Guide

For WAVE ID® Surface Mount Reader

This installation guide provides instructions for mounting the IP67 WAVE ID Surface Mount reader onto a weatherproof box.

Contents:

- IP67 Kit Installation Guide
- 2 - Screws 6-32 X 1" Machine Screws
- 2 - Rubber Washer #6 (1/4" O.D.) (.062 Thickness)
- 1 - Gasket

Important:

The Surface Mount reader was designed for **indoor use only** and is **not** suitable for outdoor use. When installed using the supplied guidelines, it complies with IP67 standards.


Installation:

1. Insert the 2 screws into the reader as shown in the picture above.
2. Thread the 2 screws through the gasket.
3. Insert the cable into the back of the reader.
4. Mount the reader with the LED facing up and tighten the 2 screws to the weatherproof box.
5. A torque force of 60 in/oz. must be used to tighten the screws to the weatherproof box.

Failure to comply with these recommended guidelines may allow moisture to seep into the weatherproof box damaging the unit and voiding the warranty.

If you have any questions, please call rf IDEAS Technical Support at 1-866-439-4884, or email at TechSupport@rfIDEAS.com

(Weatherproof Box Not Included)

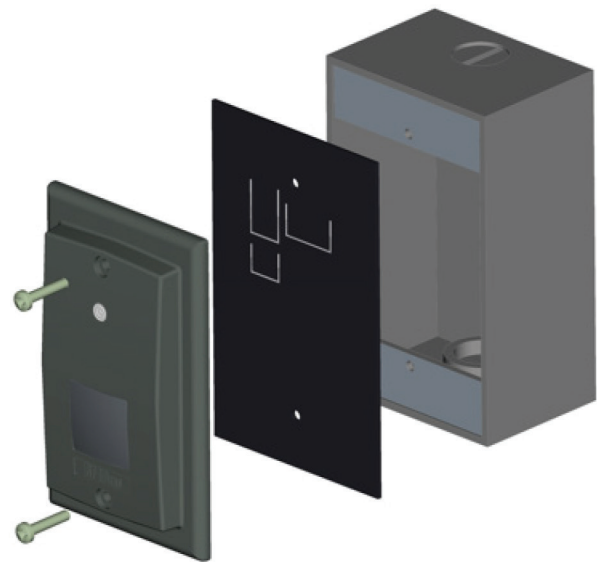

www.rfIDEAS.com

847-870-1723 | Toll-free: 866-439-4884 | sales@rfIDEAS.com