


rf **IDEAS**

Remote Card Reader Manager for Ricoh

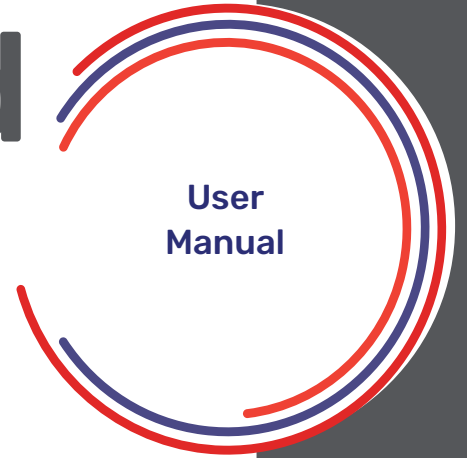

Version 1.9.0 | May 2026

Contents

1. Overview	3
1.1 rf IDEAS Remote Card Reader Manager for Ricoh Overview	3
1.2 Prerequisites & Supported Platforms	3
1.2.1 Ricoh MFP Prerequisites	3
1.2.2 rf IDEAS Supported Readers	5
1.2.3 Supported Operating Systems	5
1.2.4 Required Files	5
1.2.5 Readers Supported per Host	5
1.2.6 RICOH INTERNATIONAL B.V. Product Development Notifications.....	5
1.3 Summary of Features	6
2. Enabling the Ricoh MFP	7
2.1 Ricoh MFP	7
2.1.1 Determine Ricoh Card Reader Vendor ID (VID) and Product ID (PID)	7
2.1.2 Set the Ricoh Card Reader Vendor ID and Product ID on Ricoh MFP	8
2.1.3 Complete Ricoh MFP Configuration	10
3. Create Secure .HWG+ and Secure Blob *.INI Files and List of MFPs to Target for Multi-Device Updates	11
3.1 Create Secure .HWG+ file(s)	11
3.2 Create Secure Blob *.ini files	12
3.3 Create Secure BLE .hwg+ file	13
3.4 Obtain a secure EN.HEX firmware file.....	14
3.5 Create Onfile.zip.....	14
3.6 Compile the List of MFPs Hosting Ricoh Card Readers Requiring Configuration.....	15
4. Installing and uninstalling the rf IDEAS Remote Card Reader Manager for Ricoh	18
4.1 Verify Java (JRE or Default JDK) Version.....	18
4.2 Install or Update Java	18
4.3 Install rf IDEAS Remote Card Reader Manager for Ricoh	19
4.3.1 Download rf IDEAS Remote Card Reader Manager for Ricoh.jar.....	19
4.3.2 Install rf IDEAS Remote Card Reader Manager for Ricoh.jar.....	19
4.4 Run rf IDEAS Remote Card Reader Manager for Ricoh.....	20
4.5 Uninstallation.....	21
5. Configure the rf IDEAS Remote Card Reader Manager for Ricoh	22
5.1 Single Device Configuration (one rf IDEAS Card reader connected to Ricoh MFP).....	22
5.1.1 Login & Verify that CIS Plugin is Installed.....	22
5.1.2 If rf IDEAS Plugin is not Installed.....	24
5.1.3 Using Ricoh's Remote Installer Manager (RIM) to install RfldeasReaderPlugin & RiDPConfigServletInstaller.....	26
5.1.4 Using WIM to Install RfldeasReaderPlugin & RiDPConfigServletInstaller	26
5.1.5 Checking reader status in Single Device Configuration.....	28
5.1.6 Upload Secure .HWG+ file	29
5.1.7 Upload Secure Blob *.ini file	30
5.1.8 Upload a Secure EN.hex file	32
5.1.9 Upload a Secure BLE .hwg+ file	34
5.1.10 Upload Onfile.zip.....	35
5.2 Multi-Device / Fleet Configuration.....	36
5.2.1 Login & Verify that CIS Plugin is Installed.....	36
5.2.2 If rf IDEAS Plugin is not Installed	39
5.2.3 Using Ricoh's Remote Installer Manager (RIM) Installer Manager to install RfldeasReaderPlugin & RiDPConfigServletInstaller.....	40
5.2.4 Select a Secure .HWG+ File for a "Group" of Readers	41
5.2.5 Select a Secure Blob *.INI File for a "Group" of Readers	44
5.2.6 Select a Secure BLE .hwg+ File for a "Group" of Readers	46
5.2.7 Upload a Secure EN.hex File for a Group of Readers	48
5.2.8 Upload Onfile.zip for a group of readers.....	50
5.2.9 Export Results from Multi-Device Configuration.....	52
6. Have Additional Questions/Need Assistance?	53

1. Overview

1.1 rf IDEAS Remote Card Reader Manager for Ricoh Overview

The rf IDEAS Remote Card Reader Manager for Ricoh allows technical service professionals to remotely manage rf IDEAS readers attached to Ricoh MFPs. The current version of the application provides the ability to remotely update Secure .hwg+ files (used to configure reader card types, reader settings, and data formatting), Secure Blob *.ini files (used to configure Smartcard secure reader settings and security keys (sent to SAM card) for Legic, MIFARE and other Smartcards), BLE HWG+ (used to configure BLE data settings and BLE keys into Bluetooth mobile reader), Onfile.zip (used to upload multiple updates as one task (e.g. Firmware, Credential Settings, and Secure Settings) and EN.hex files (used to load the firmware file into the reader) to rf IDEAS readers attached to G2, G2.5, and G3 SOPs. End users can either configure readers individually, or a fleet of multiple readers simultaneously.

NOTE: RICOH Card Reader Management Tool (RCRMT) is now Ricoh's primary supported application for updating card readers on a Ricoh device. This rf IDEAS RCRM application and plugin are still supported. The RCRMT transmits and leverages the same rf IDEAS RCRM plugin which can be downloaded separately at <https://www.rfideas.com/RicohRCRM>. Please check back for updates, and in case of a version update to rf IDEAS RCRM and plugin, download and install the plugin into the following RICOH CRMT folders, overwriting the previous RfIdeasReaderPlugin file:

C:\ProgramData\Ricoh\RCRMT\VendorPlugins\RFIdeas - PcProx

C:\ProgramData\Ricoh\RCRMT\VendorPlugins\RFIdeas - PcProx Legic

1.2 Prerequisites & Supported Platforms

1.2.1 Ricoh MFP Prerequisites

In order to use the rf IDEAS Remote Card Reader Manager for Ricoh, you must make sure that the MFPs you are wishing to remotely configure meet the following requirements.


Component	Prerequisites
MFP	G2, G2.5 or G3 SOP
SmartSDK	Version 2.30 (and above) must be installed on each machine The rf IDEAS Remote Card Reader Manager application is not compatible with SmartSDK versions lower than version 2.30. If the SOP(s) you want to remotely configure do not have version 2.30 or higher, you will need to upgrade the SmartSDK to version 2.30 (and above) before you can remotely configure the SOP.
Firmware	Latest MFP firmware must be installed on each machine
HTTPS	HTTPS must be enabled on each MFP
Energy Saving Mode	Make sure Energy Saving Mode is set to 'Low Power Mode' or 'Off'. If the MFP is set to 'Sleep Mode' or Energy Saving 'On', then the Remote Card Reader Manager application will be unable to communicate to the reader while the MFP is in deep energy save / sleep mode.
SOP Application	Applications must use the CIS Interface of the SmartSDK Version 2.30 (and above)
rxconfServlet.zip Plugin	Version 3.8.8 must be installed on each SOP using SDK/J Prior versions of the rxconfServlet.zip plugin may not be compatible. To ensure compatibility, please install rxconfServlet 3.8.8 on all MFPs you wish to remotely configure. If the MFP is using a 3rd party SOP application, that application must be able to install and run operations with rxconfServlet 3.8.8. You may encounter compatibility issues if the 3rd party SOP application is using a prior version of the rxconfServlet.zip plugin.
Streamline NX	If Streamline NX is in use, version 23R1 or later is needed, and Embedded Authentication settings (Keyboard-emulation Reader Card Reader Settings) must specify CIS Plugin Name as com.ridp.usb.cis.rfideas, as well as the correct Vendor ID and Product ID.

1. Overview


1.2 Compatibility & Supported Platforms

1.2.1 Ricoh MFP Prerequisites

CAUTION: To work properly with Streamline NX, the CIS Plugin Name needs to be configured for Keyboard-emulation readers in the Card Reader Settings under Embedded Authentication Properties. This requires an additional change. Specify CIS Plugin Name as `com.ridp.usb.cis.rfideas`, as well as the correct Vendor ID and Product ID.

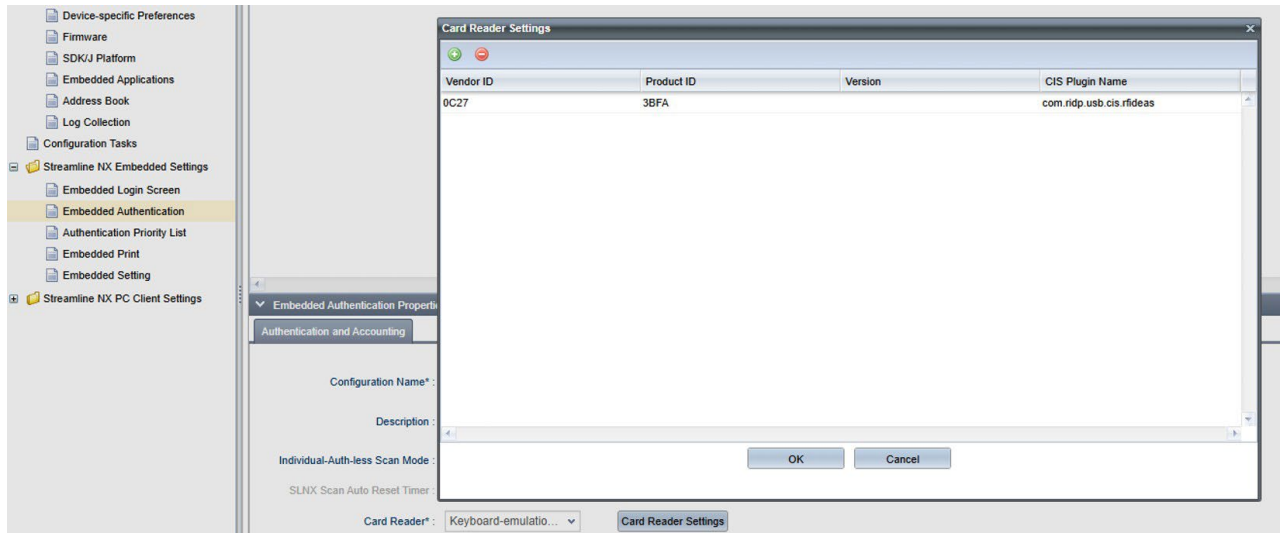

In the Advanced Settings, please set the global configuration key 'core.ui.embedded.authentication.cisplugin.display' to 'true'.

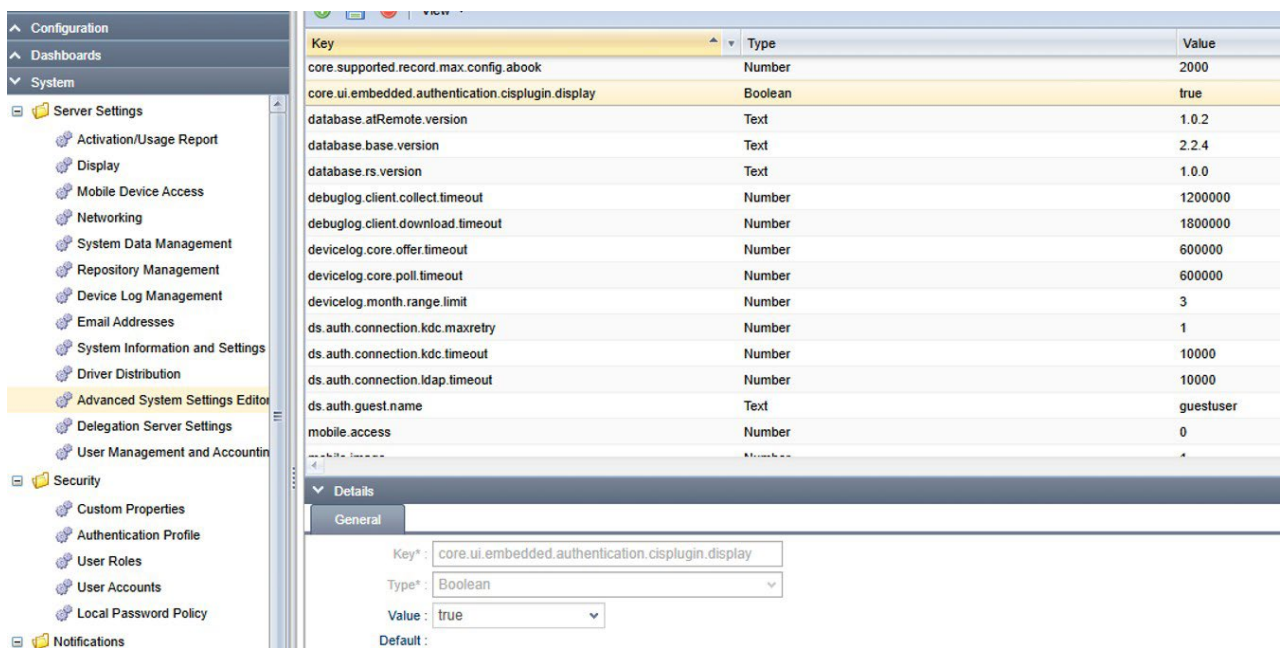

1. Overview

1.2 Compatibility & Supported Platforms

1.2.2 rf IDEAS Supported Readers

rf IDEAS Models/SKUs

RDR-80xx1xxU	RDR-7Lx1xxU	RDR-30xx1xxU-RSOP
RDR-80xx1xxU-RSOP	KT-80xx1xxU	RDR-80Lx1xxU
KT-80xx1xxU-RSOP	RDR-80xx1xxU-G3	RDR-8Xxx1xxU
RDR-75x1xxU	RDR-30xx1xxU	RDR-30xx1xxU-MXS

1.2.3 Supported Operating Systems

• Window OS

The rf IDEAS Remote Card Reader Manager for Ricoh requires Java 8 SE. You can download the Java Runtime Environment from one of the following OpenJDK sources:

1. [Click here](#) to download Runtime Environment from Amazon Corretto.
2. [Click here](#) to download Runtime Environment from Azul Zulu builds.

1.2.4 Required Files

- **RfIdeasReaderPlugin.zip v1.1.0 and RiDPConfigServletInstaller.zip v2.02.28** Ricoh Card Reader CIS Plugin included in the following download package folder: rf IDEAS Remote Card Reader Manager for Ricoh\resources
- **.json file (parameters for CIS Plugin installation, removal, etc.)** Sample included in the following download package folder: rf IDEAS Remote Card Reader Manager for Ricoh\resources
- **csv file (list of the target MFPs and their IP address)** Sample included in the following download package folder: rfIDEAS Remote Card Reader Manager for Ricoh\sample_files
- **Secure .hwg+ file** Sample included in the following download package folder: rf IDEAS Remote Card Reader Manager for Ricoh\sample_files
- **Secure Blob *.ini file** Sample included in the following download package folder: rf IDEAS Remote Card Reader Manager for Ricoh\sample_files

1.2.5 Readers Supported per Host

- Number of readers supported per host: 1 connected to the SOP

1.2.6 RICOH INTERNATIONAL B.V. Product Development Notifications

This product has been developed using Ricoh Company Ltd's proprietary embedded architecture or other proprietary Ricoh products.

This rf IDEAS Remote Card Reader Manager for Ricoh User Manual includes information which has been provided by Ricoh Company, Ltd, and such information is © Ricoh Company, Ltd or its licensors. Copying in whole or in part of the Ricoh information without the permission of Ricoh is prohibited, except to the limited extent permitted by mandatory applicable law.

Products

RfIdeasReaderPlugin
1667760129

RiDPConfigServletInstaller
1667760130

1. Overview

1.3 Summary of Features

Single Device Configuration

Includes rf IDEAS CIS Plugin(s) deployment and reader configuration

Host Device (i.e. MFP with rf IDEAS reader) access

Task mode

File(s) required for the chosen Task or Sub-Task

Task or Sub-Task logs

Task or Sub-Task initialization

rf IDEAS reader-related Task

Documentation & Help

- End-User License Agreement
- User Manual
- Reader Configuration Utilities
- Technical Support Request Form
- Suggest New Features or Enhancements

Multi-Device / Fleet Configuration

Includes rf IDEAS CIS Plugin(s) deployment and reader configuration

File(s) required for the chosen Task

File(s) content visualization

Configuration results

Export to .CSV file

Sub-Task addition

Task or Sub-Task initialization

Task or Sub-Task logs

rf IDEAS reader-related Task

rf IDEAS reader-related Sub-Task(s)

Documentation & Help

- End-User License Agreement
- User Manual
- Reader Configuration Utilities
- Technical Support Request Form
- Suggest New Features or Enhancements

Task No.	Reader Configuration File	View Config file content	Groups	Total # of Readers	Remove
1	Select Reader Configuration File	-	Select Device Grou...	0/0	Remove


2. Enabling the Ricoh MFP

2.1 Ricoh MFP

2.1.1 Determine Ricoh Card Reader Vendor ID (VID) and Product ID (PID)

Option 1 – Using the rf IDEAS Configuration Utility

- Plug your rf IDEAS reader into the computer
- Start the rf IDEAS Configuration Utility
 - Can be downloaded here: rfideas.com/support/tools/downloads
- Click the Connect icon in the left hand nav.
- Once connected, you will see your reader appear under Device List

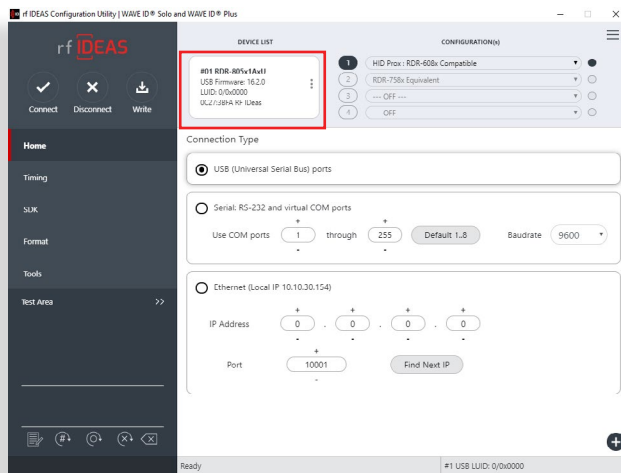


- Copy the VID and PID shown under Device List




Option 2 – Using Windows Device Manager


- Start Device Manager (Windows OS)
- Locate and Expand Human Interface Devices

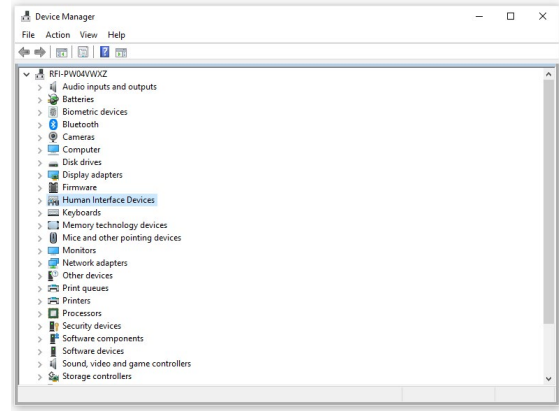

- Right-click on the USB input device and select "Properties"

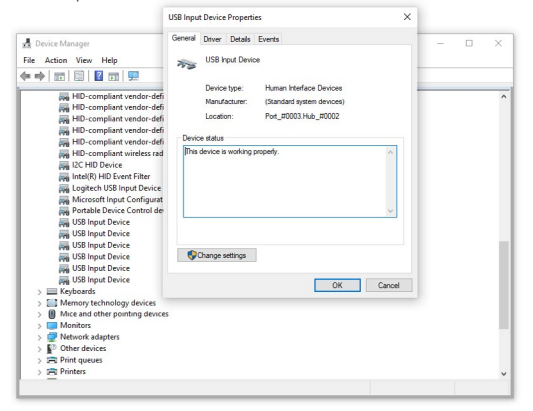

- Click the "Details" tab, then set Property to "Hardware IDs"
- Copy the VID and PID shown under Device List

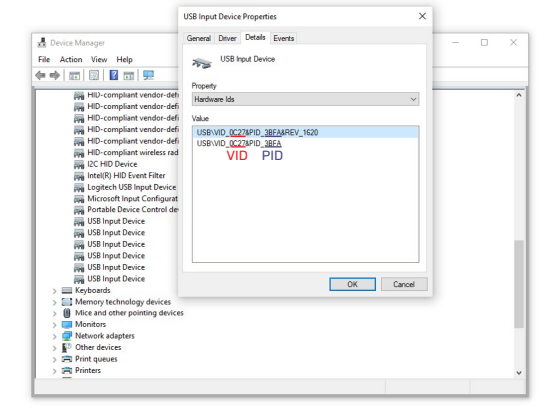

2. Enabling the Ricoh MFP

2.1 Ricoh MFP

2.1.2 Set the Ricoh Card Reader Vendor ID and Product ID on Ricoh MFP

Option 1 – Using the Web Image Monitor (WIM)

- Login into the Web Image Monitor with MFP username + password
WIM -> Device Management




- Go to Configuration
WIM -> Device Management -> Configuration

- Click on Program/Change USB Device List
WIM -> Device Management -> Configuration -> Program/Change USB Device List

- Enter the four characters collected earlier into respective Vendor ID and Product ID field
• e.g. Vendor ID: "0C27", Product ID "3BFA"

- Enter the characters below into respective Vendor ID and Product ID field
• e.g. Vendor ID: "0C27", Product ID "3CFA"

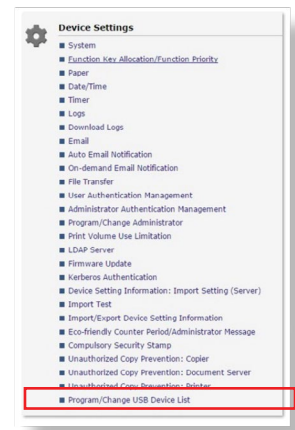

Program/Change USB Device List

OK Cancel

If settings are changed while the device is connected, reconnect the device or restart the machine to apply the changes.
Enter hexadecimal numbers (0 - 9, a - f, A - F) with a maximum of 4 digits for each ID.

■ Device 1
Vendor ID : 0C27
Product ID : 3BFA

■ Device 2
Vendor ID : 0C27
Product ID : 3CFA

OK Cancel

Program/Change USB Device List

OK Cancel

If settings are changed while the device is connected, reconnect the device or restart the machine to apply the setting changes.
Enter hexadecimal numbers (0 - 9, a - f, A - F) with a maximum of 4 digits for each ID.

Device No.	Vendor ID	Product ID
Device 1	0C27	3BFA
Device 2	0C27	3CFA
Device 3		
Device 4		
Device 5		
Device 6		
Device 7		
Device 8		
Device 9		
Device 10		


OK Cancel

2. Enabling the Ricoh MFP

2.1 Ricoh MFP

2.1.2 Set the Ricoh Card Reader Vendor ID and Product ID on Ricoh MFP

Setting Vendor ID and Product ID on G3 Machines

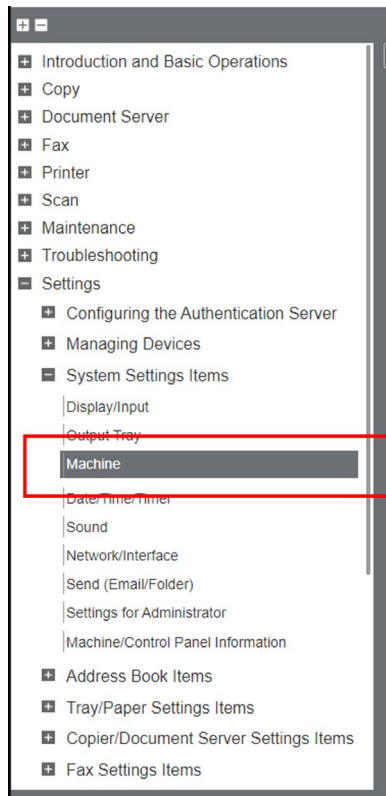

External Device	
Setting Items	Description
Register/Change USB Device List	Register Product ID and Vendor ID information for an IC card reader device as a set to the device list to limit the usage of USB devices. The "Product ID" and "Vendor ID" information for a USB device have been assigned by the manufacturer to identify the individual device. "Vendor ID" input settings are between 0x0001 and 0xFFFF and "Product ID" input settings are between 0 and 0xFFFF. Up to ten pairs of "Product ID" and "Vendor ID" information can be registered.

- Please reboot (switch off - then on) the device after making those changes.

2. Enabling the Ricoh MFP

2.1 Ricoh MFP

2.1.2 Set the Ricoh Card Reader Vendor ID and Product ID on Ricoh MFP

Option 2 – Using the Panel

- Login into the Panel
Panel -> User Tools

- Go to Machine Settings
Panel -> User Tools -> Machine Settings

- Click on Program/Change USB Device List
Panel -> User Tools -> Machine Settings -> Program/Change USB Device List

- Enter the four characters collected earlier into respective Vendor ID and Product ID field
 - e.g. Vendor ID: "0C27", Product ID "3BFA"

- Enter the characters below into respective Vendor ID and Product ID field
 - e.g. Vendor ID: "0C27", Product ID "3BFA"

2.1.3 Complete Ricoh MFP Configuration



- Set the "Screen Startup Mode" to Normal
 - The default Screen Startup Mode is "Quick". It boots the screen as fast as possible even though some background applications may not be ready yet.
 - The "Quick" startup mode may cause misunderstanding that device is ready to use.
 - To avoid those misunderstandings, it is recommended to set "Normal" Screen Startup Mode.

- Enable Human Detection Sensor
 - This sensor should be enabled by factory. The settings organization has been changed when migrating models from Classic screen type to the new Standard screen type.
 - The following subsections shows screenshots.
 - Screen type Classic
 - Press [Settings] on the Home screen. Press [Machine Features Settings].
 - Press [System Settings] [General Features] tab [Human Detection Sensor], and then press [Active].
 - Press [OK]. After completing the procedure, press [Home]
 - Screen type Standard
 - Press [Settings] on the Home screen. Press [System Settings].
 - Press [Machine][Power/Energy Saving][Human Detection Sensor].

3. Create Secure .HWG+ and Secure Blob *.INI Files and List of MFPs to Target for Multi-Device Updates

3.1 Create Secure HWG+ file(s)

- You will need to use the rf IDEAS Configuration Utility ([download here](#)) to create a Secure .HWG+ file(s) that can be used to remotely update readers with the rf IDEAS Remote Card Reader Manager for Ricoh application.
- Secure .hwg+ files allow you to configure reader card types, reader settings, and data formatting.

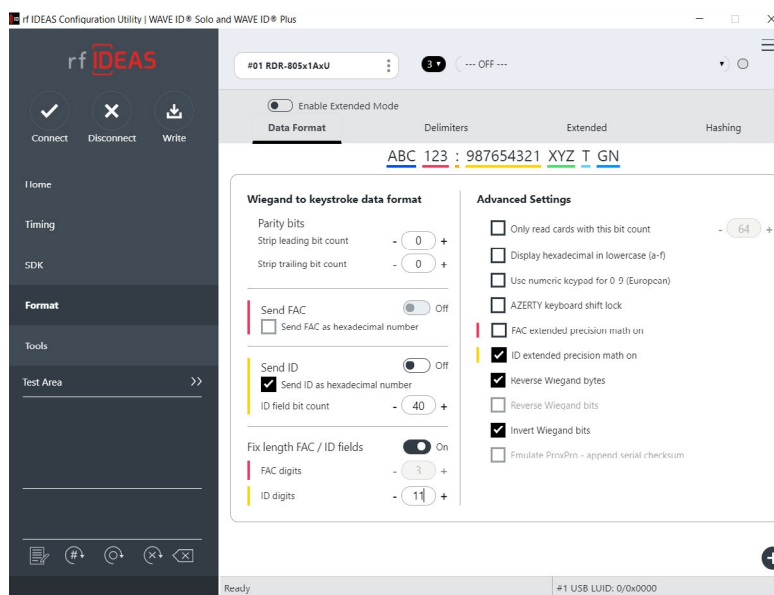
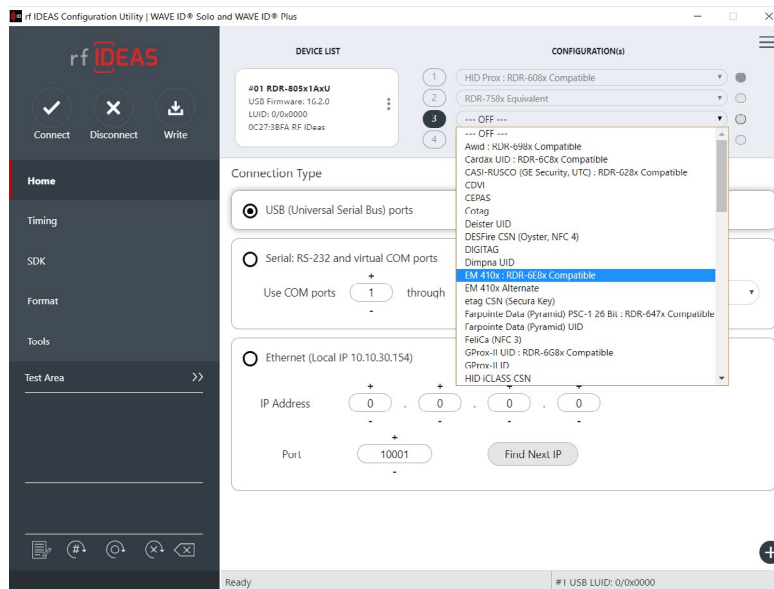


Sample Secure HWG+ files are included with the rf IDEAS Remote Card Reader Manager for Ricoh tool installer package, to help you understand the format and content within a Secure .HWG+ file.

3. Create Secure .HWG+ and Secure Blob *.INI Files and List of MFPs to Target for Multi-Device Updates

3.2 Create Secure Blob *.ini files

- You will need to use the rf IDEAS Smartcard Manager ([download here](#)) to create a Secure Blob *.INI file that can be used to remotely update secure Smartcard readers with the rf IDEAS Remote Card Reader Manager for Ricoh application.
- Secure Blob *.INI files are used to configure Smartcard secure reader settings and security keys (sent to SAM card) for Legic, MIFARE and other Smartcards.

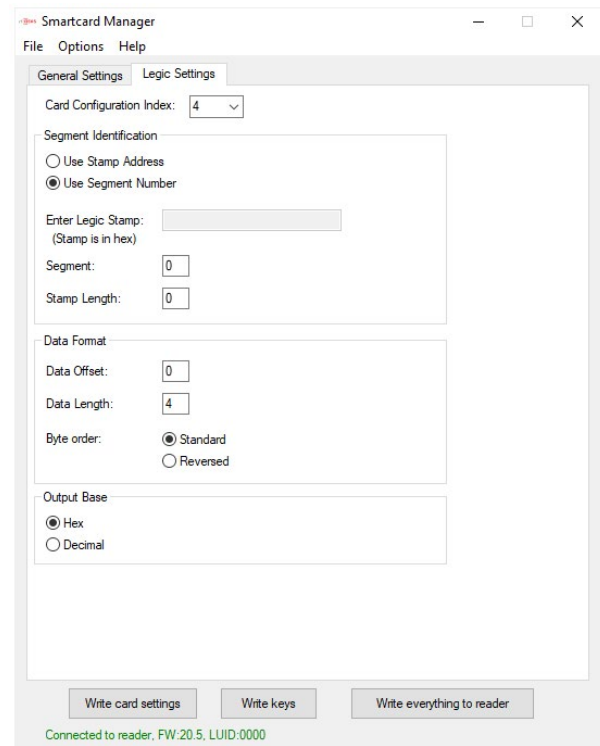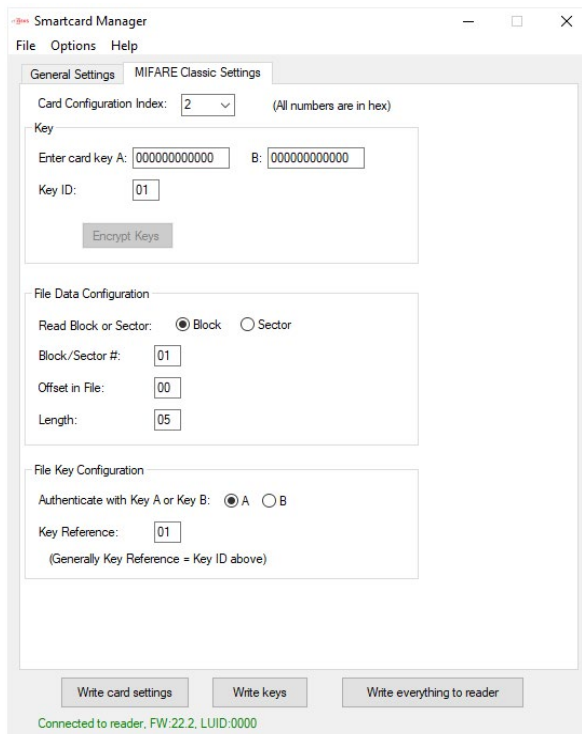

Sample Secure Blob *.INI files are included with the rf IDEAS Remote Card Reader Manager for Ricoh tool installer package, to help you understand the format and content within a Secure Blob *.INI file.


Further configuration guides are available at:

- <https://knowledgebase.rfideas.com/how-do-i-configure-my-plus-reader-to-read-different-card-types/>
- <https://knowledgebase.rfideas.com/how-to-configure-my-plus-reader-for-2-different-card-formats-that-use-the-same-card-type/>

3. Create Secure .HWG+ and Secure Blob *.INI Files and List of MFPs to Target for Multi-Device Updates

3.3 Create Secure BLE .hwg+ file

- You will need to use WAVE ID Mobile Configurator, download from [here](#).
- Open the utility and connect the mobile Bluetooth reader.
- Once connected, change required BLE configuration settings in the reader and save them in reader by Write Config button. (Write Key as needed, see Mobile Configurator manual for details.)

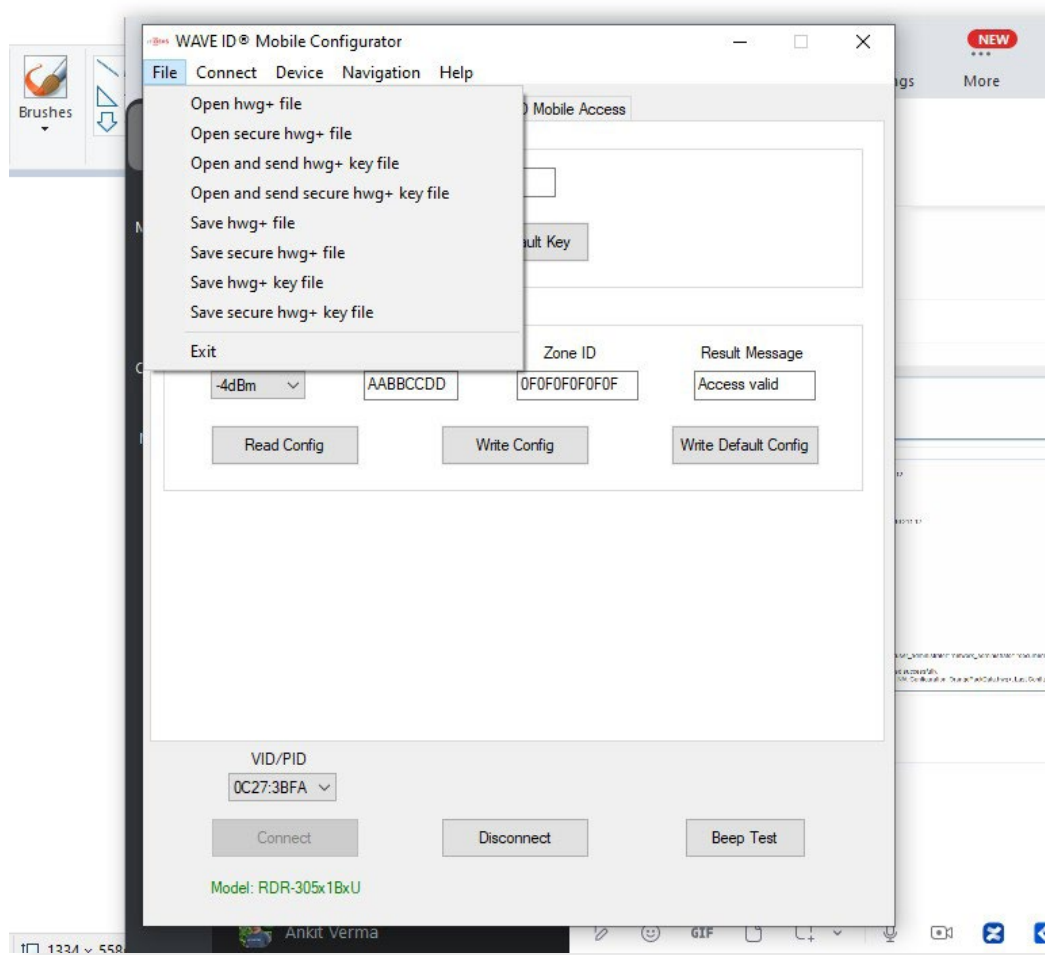

- Go to the file tab at top left of the Wave ID Mobile Configurator Utility and select save secure HWG+ file option for saving BLE .HWG+ file, and if required, select save secure HWG+ key file option for saving BLE .HWG key file
- Click OK on pop up and choose the location where the secure BLE .HWG+ file, and if required, where the BLE .HWG+ key file needs to be saved.

3. Create Secure .HWG+ and Secure Blob *.INI Files and List of MFPs to Target for Multi-Device Updates


3.4 Obtain a secure EN.HEX firmware file

Secure EN.HEX firmware files are provided by rf IDEAS Technical Support or an rf IDEAS Pre-Sales Engineer. If you would like to request a firmware file you will need to contact rf IDEAS Tech Support.

- The following are ways you can request a firmware file from rf IDEAS:
 - Submit the request [here](#)
 - Send an email to techsupport@rfideas.com
 - Initiate a live chat through the [website](#)
- Once the request is submitted, rf IDEAS will review your submission. If your request is approved, then the secure EN.HEX firmware file will be sent to you by the rf IDEAS Tech Support team. If your request is not approved, the rf IDEAS Tech Support team will provide guidance on your submission.

3.5 Create Onefile.zip


- You will need to use the rf IDEAS Configuration Utility ([download here](#)) to create a Onefile.zip file(s) that can be used to remotely update readers with the rf IDEAS Remote Card Reader Manager for Ricoh application.
- Instead of uploading files individually, you can use the “One File” feature under Tools > One File to combine them into a single file, to be uploaded as a single task.

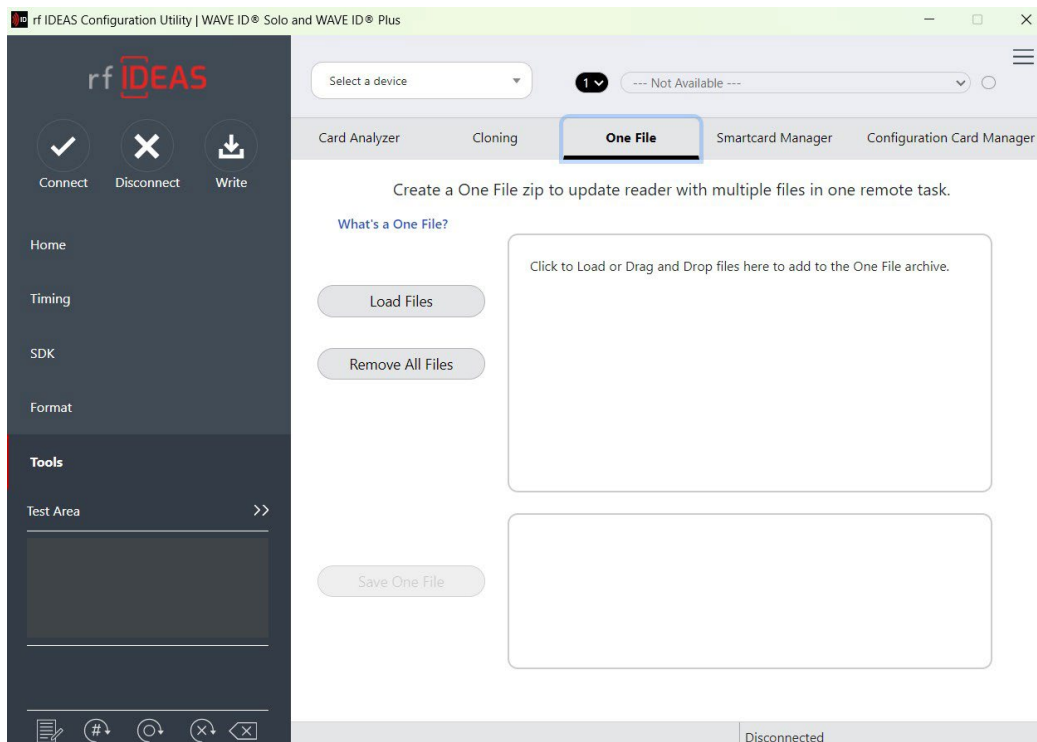

- Click “Load Files” and select the required update files from your local storage, or simply drag and drop the files.
- Once the selected files appear in the file list area, click Save One File as shown in below image.

3. Create Secure .HWG+ and Secure Blob *.INI Files and List of MFPs to Target for Multi-Device Updates

3.5 Create Onfile.zip

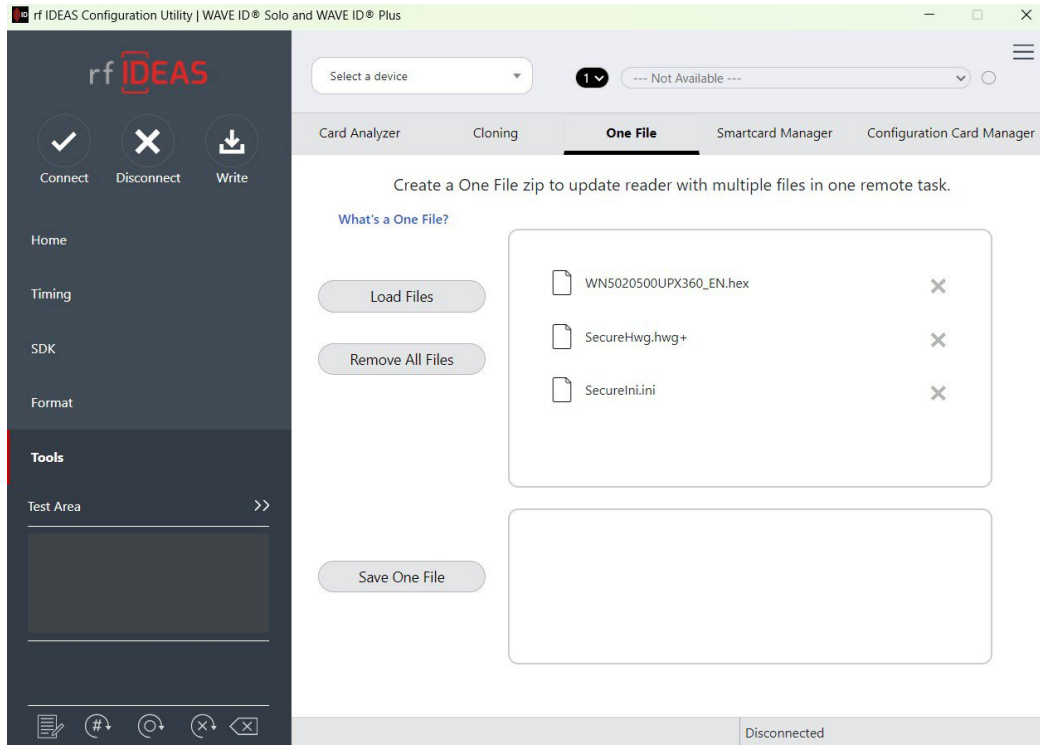

- Once you click on Save One File, a onefile.zip will be created in local space.


See the Configuration Utility User Manual within the Help menu of the rf IDEAS Configuration Utility for more information on One File.

3.6 Compile the List of MFPs Hosting Ricoh Card Readers Requiring Configuration

1. Log onto the SLNX admin page




2. Navigate to the Devices tab

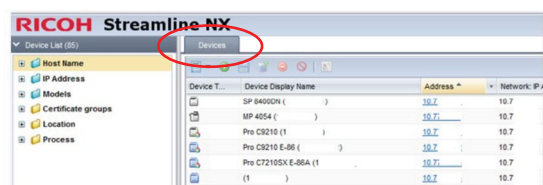

3. Create Secure .HWG+ and Secure Blob *.INI Files and List of MFPs to Target for Multi-Device Updates

3.6 Compile the List of MFPs Hosting Ricoh Card Readers Requiring Configuration


3. Right click on the name header and select "Columns".

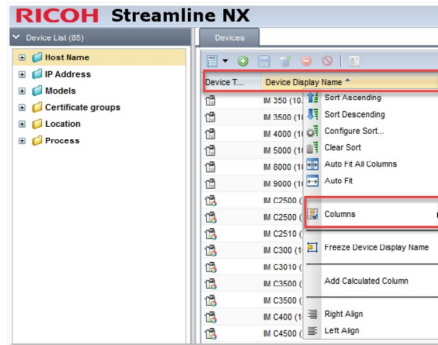

4. Ensure the following "column" objects are selected (you can select others, the following is the minimum requirement):

- Device Display Name
- Address
- Network: IP Address
- Operational Panel
- Group


NOTE: The tool may or may not ignore unneeded columns

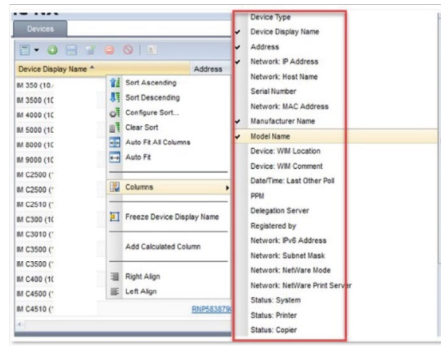


5. Click on "Views" and select "Save as"



6. Enter a name for your new view and click the "OK" button

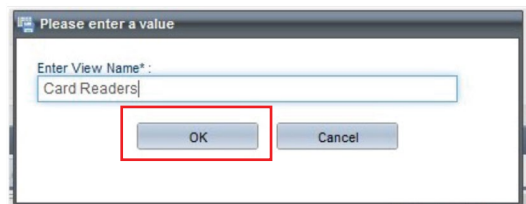


7. Now you will have the new View Name you just saved via the View dropdown for future use.

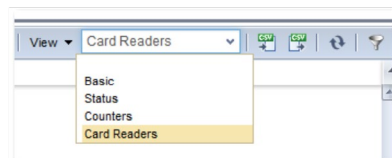

3. Create Secure .HWG+ and Secure Blob *.INI Files and List of MFPs to Target for Multi-Device Updates

3.6 Compile the List of MFPs Hosting Ricoh Card Readers Requiring Configuration

8. To Export the device, select the CSV export icon.



9. The exported CSV file will be downloaded to your browser's default location.

See sample .CSV file below included in

rf IDEAS Remote Card Reader Manager for Ricoh\sample_ files

# Format Version: https://protect-us.mimecast.com/s/Cr8RCxkw1jum3VZcWAH7P?domain=5.1.1.0				
# Generated at: 09/30/2021 14:17:44				
# Function Name: Device List				
# Device Display Name	Address	Network: IP Address	Operation Panel	Group
dev_displayname	dev_address	dev_ipaddress	operation_panel	dev_real_group_name
MP C2004ex (10.10.30.130)	RNP58387929482F.tc.ds	10.10.30.130	Smart	Group1
MP C2004ex (10.10.30.142)	RNP002673B7A55C.tc.ds	10.10.30.142	Smart	Group2

4. Installing and uninstalling the rf IDEAS Remote Card Reader Manager for Ricoh.

4.1 Verify Java (JRE or Default JDK) Version

The rf IDEAS Remote Card Reader Manager for Ricoh is a Java application. Use the following commands to determine if Java 8 SE is currently installed on your PC.

- Type `java -version` and hit ENTER, this command checks the version of the Java Runtime Environment (JRE) installed on your system. JRE is needed to run Java applications.

```
C:\Windows\System32>java -version
openjdk version "1.8.0_412"
OpenJDK Runtime Environment Corretto-8.412.08.1 (build 1.8.0_412-b08)
OpenJDK 64-Bit Server VM Corretto-8.412.08.1 (build 25.412-b08, mixed mode)
```

- Type `javac -version`, and then hit ENTER to check the JDK installed in your system.

```
C:\Windows\System32>javac -version
javac 1.8.0_412
```

4.2 Install or Update Java

- You can download the Java Runtime Environment from one of the following OpenJDK sources:
 1. [Click here](#) to download Runtime Environment from Amazon Corretto.
 2. [Click here](#) to download Runtime Environment from Azul Zulu builds.

How to download and install Java on Windows?

Amazon Corretto	Click here for the online user manual for Amazon Corretto. Click here for the offline user manual for Amazon Corretto.
Azul	Click here for the user manual for Azul.

4. Installing and uninstalling the rf IDEAS Remote Card Reader Manager for Ricoh.

4.3 Install rf IDEAS Remote Card Reader Manager for Ricoh

4.3.1 Download rf IDEAS Remote Card Reader Manager for Ricoh.zip

- [Click here](#) to download the rf IDEAS Remote Card Reader Manager installation file (.zip file), which contains the rfIDEAS Remote Card Reader Manager for Ricoh.exe. Extract installation file from the .zip file.

4.3.2 Install rf IDEAS Remote Card Reader Manager for Ricoh

Double-click on the installation file.


- The installer will show the prerequisite information, indicating that Java is required to run the application.
- Click "OK" to proceed and follow the installation steps.
- To proceed with the installation, accept the License Agreement and select "Next".
- Choose the installation path;
 - The default Destination Folder path is "C:\Program Files (x86) \rf IDEAS Remote Card Reader Manager for Ricoh".
 - Alternatively, you can enter your desired path.
 - Click the "Install" button to begin the installation.
- When installation is successfully completed, click Finish to close the installer.

4. Installing and uninstalling the rf IDEAS Remote Card Reader Manager for Ricoh.

4.4 Run rf IDEAS Remote Card Reader Manager for Ricoh

- Navigate to the rf IDEAS Remote Card Reader Manager for Ricoh installation folder:
 - If the installation path was set to the default location, the folder will be located at: C:\Program Files (x86) \rf IDEAS Remote Card Reader Manager for Ricoh.
 - If a custom path was selected during installation, the folder will be in your chosen location.
- To launch the rf IDEAS Remote Card Reader Manager for Ricoh application, double click the rf IDEAS Remote Card Reader Manager for Ricoh vx.x.x.

Name	Type	Size
lib	File folder	
resources	File folder	
sample_files	File folder	
icon	Icon	37 KB
rf IDEAS Remote Card Reader Manager for Ricoh v1.5.0	Executable Jar File	365 KB
uninstall	Application	85 KB

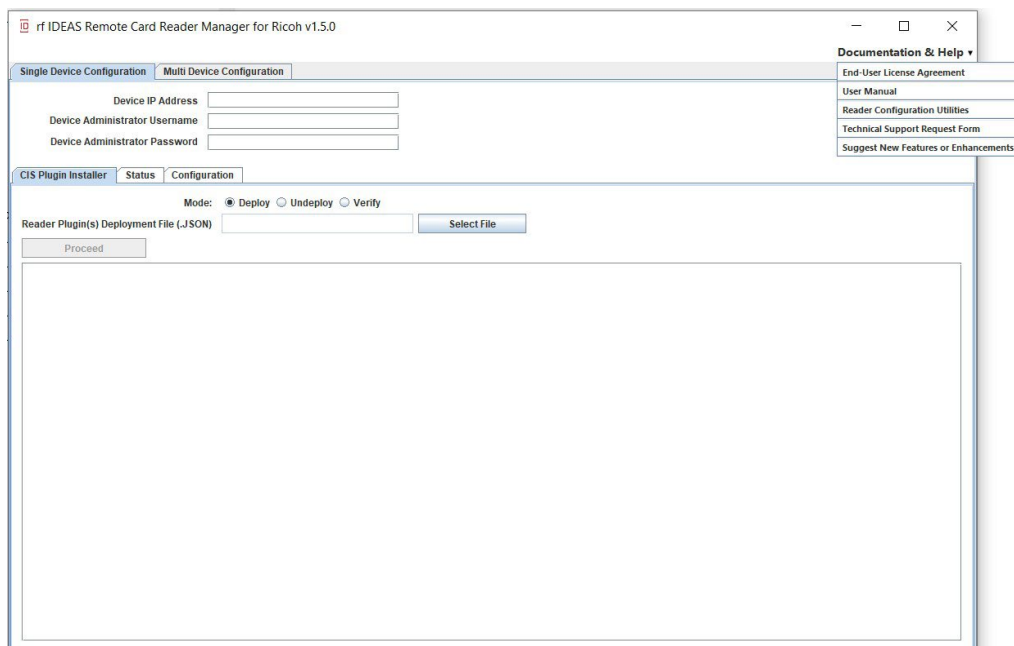


4. Installing and uninstalling the rf IDEAS Remote Card Reader Manager for Ricoh.

4.5 Uninstallation

There are two methods to uninstall the rf IDEAS Remote Card Reader Manager for Ricoh


1. Using the Application Folder

- Navigate to the Application Folder
 - Go to the folder structure where the application is installed.
 - Double-click on the Uninstall executable.

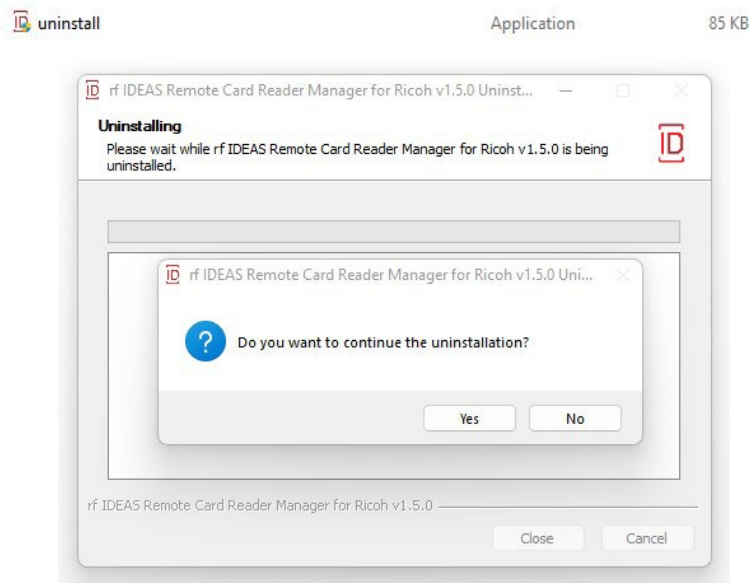


2. Using the Start Menu

- Using Control Panel
 - Click on the Start Menu.
 - Go to Menu > All or Menu > Apps.
 - Right-click on rf IDEAS Remote Card Reader Manager for Ricoh.

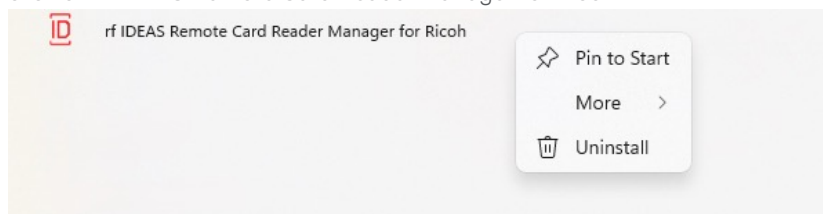

- Click on "Uninstall".
- Control Panel window will open.
- Search for the application in Uninstall or change a program.
- Right-click on rf IDEAS Remote Card Reader Manager for Ricoh.
- Click on Uninstall/Change.

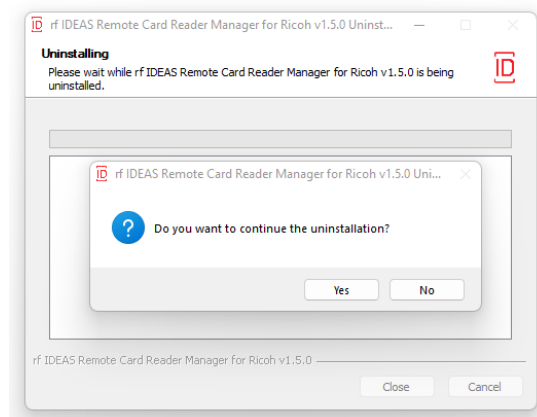

- To continue Uninstallation, select "Yes".

5. Configure the rf IDEAS Remote Card Reader Manager for Ricoh

5.1 Single Device Configuration (one rf IDEAS Card reader connected to Ricoh MFP)

5.1.1 Login & Verify that CIS Plugin is Installed

- Click on the Single Device Configuration tab
- Enter the IP address + Admin credentials (Username and Password) for the Host MFP (MFP onto which the rf IDEAS reader is connected to)
- Click on the “CIS Plugin Installer” tab
- Set the CIS Plugin installer’s mode to “Verify”

- Click on the Select file button to load the rf IDEAS plugin “deployment” .json file

- Select the following file:
rf IDEAS Remote Card Reader Manager for Ricoh\resources\deploycardreader.json, and click Open
- Click “Proceed” button

5. Configure the rf IDEAS Remote Card Reader Manager for Ricoh

5.1 Single Device Configuration (one Ricoh Card reader connected to Ricoh MFP)

5.1.1 Login & Verify that CIS Plugin is Installed

Note: If reader and VID/PID is changing, then follow the below steps for CIS Plugin installer.

(For other applications like Streamline or CloudStream, the Plugin and VID PID may not be correct by default. Please see documentation of those tools for how to upload rf IDEAS plugin or set correct VID PID.)

Steps to change VID/PID:

- Check the reader VID/PID and if it is changing, update the VID/PID in .json file and re-install CIS Plugin (using “Deploy”)
- Example: if VID should be 0C27 and PID should be 3B4C, then under deploycardreader.json file, edit to:

```
"cis_plugin_settings":{
    "class":"KSR",
    "package_name":"com.ridp.usb.cis.rfideas",
    "name":"pcProx Card Reader",
    "vendor_id":"0C27",
    "product_id":"3B4C"
},
```

- Save the file and use that file while performing CIS Plugin Installation (“Deploy”)

Sample Responses

Plugins are installed on MFP

The screenshot shows the 'CIS Plugin Installer' window with the 'Status' tab selected. The log content is as follows:


```
C:\Program Files\rf IDEAS Apps\rf IDEAS_Remote_Card_Reader_Manager_for_Ricoh_alpha_v1.3.0-alpha+328\resources\deploycardreader.json selected.
=====
2024-03-19 14:06:09 : Info: Processing device 10.10.211.12 - CIS Plugin installation status verification.
=====
2024-03-19 14:06:10 : Reading Reader Configs from file: C:\Program Files\rf IDEAS Apps\rf IDEAS_Remote_Card_Reader_Manager_for_Ricoh_alpha_v1.3.0-alpha+328\resources\deploycardreader.json
2024-03-19 14:06:11 : Debug: [10.10.211.12] Trying to connect.
2024-03-19 14:06:11 : Debug: [10.10.211.12] Checking device compatibility...
2024-03-19 14:06:40 : Debug: [10.10.211.12] isSOP = true. Connected to rxop success.
2024-03-19 14:06:40 : Debug: [10.10.211.12] Checking if servlet conf needed.
2024-03-19 14:06:40 : Info: [10.10.211.12] RxConfServlet is not needed
2024-03-19 14:06:48 : Debug: [10.10.211.12] received app info list: 39
2024-03-19 14:06:48 : Info: [10.10.211.12] Verification success! App is installed. 1667760129
2024-03-19 14:06:48 : Info: [10.10.211.12] Verification success! App is installed. 1667760130
2024-03-19 14:06:49 : [10.10.211.12] verify assignment of reader to cis plugin...
2024-03-19 14:06:52 : [Info]10.10.211.12] setting reader were fetched...
2024-03-19 14:06:52 : [Info]10.10.211.12] setting authentication is enabled. SUCCESS
2024-03-19 14:06:52 : [Info]10.10.211.12] setting <USB_CLASS> is equal: KSR SUCCESS
2024-03-19 14:06:52 : [Info]10.10.211.12] setting <PLUGIN> is equal: com.ridp.usb.cis.rfideas SUCCESS
2024-03-19 14:06:52 : [Info]10.10.211.12] setting <READER_NAME> is equal: pcProx Card Reader SUCCESS
2024-03-19 14:06:52 : [Info]10.10.211.12] setting <VENDOR_ID> is equal: 0C27 SUCCESS
2024-03-19 14:06:52 : [Info]10.10.211.12] setting <PRODUCT_ID> is equal: 3BFA SUCCESS
2024-03-19 14:06:52 : [Info]10.10.211.12] setting <READER_USED> is equal: USB SUCCESS
2024-03-19 14:06:52 : [10.10.211.12] Process complete.
=====
```

5. Configure the rf IDEAS Remote Card Reader Manager for Ricoh

5.1 Single Device Configuration (one rf IDEAS reader connected to Ricoh MFP)


5.1.1 Login & Verify that CIS Plugin is Installed

Plugins are not installed on MFP

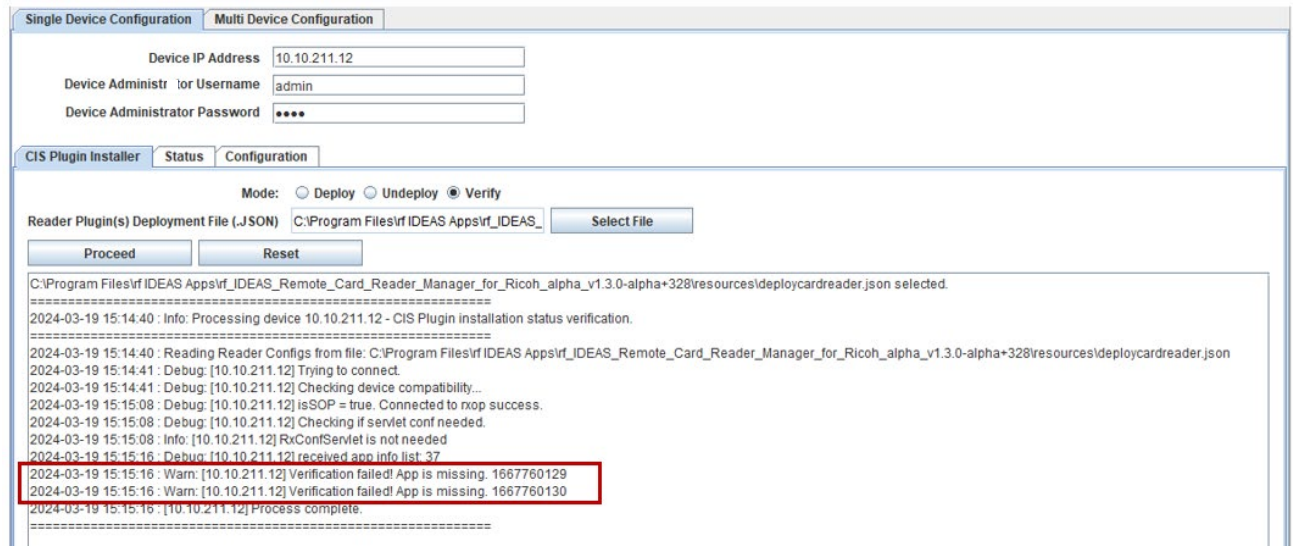

5.1.2 If rf IDEAS Plugin is not Installed

- If the rf IDEAS plugins are not installed, please set the CIS Plugin Installer's mode to "Deploy"

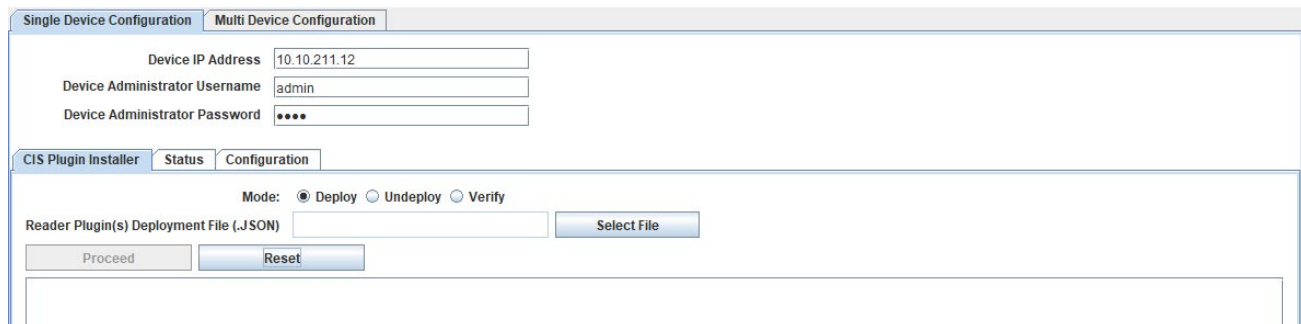


- Click on the Select file button to load the rf IDEAS plugin "deployment" .json file
- Select rf IDEAS Remote Card Reader for Ricoh\resources\deploycardreader.json

5. Configure the rf IDEAS Remote Card Reader Manager for Ricoh

5.1 Single Device Configuration (one rf IDEAS reader connected to Ricoh MFP)


5.1.2 If rf IDEAS Plugin is not Installed

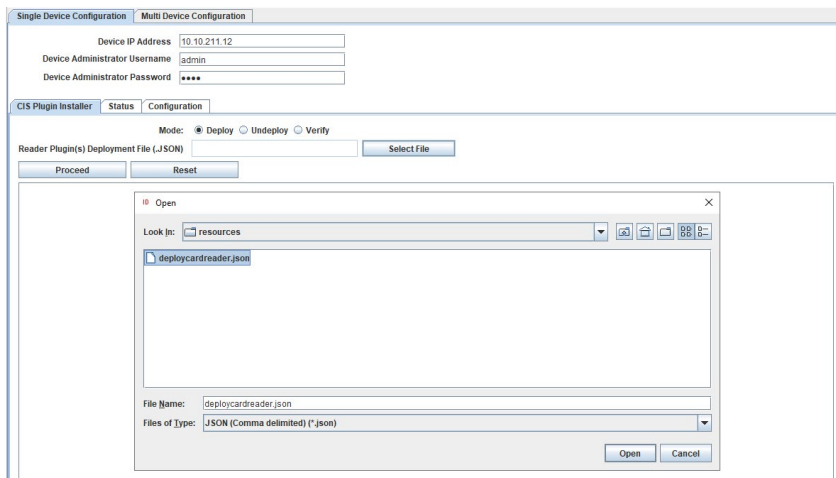

- Click the “Proceed” button
- Click “Yes” for the rf IDEAS CIS Plugin(s) to be installed on the target Ricoh MFP

Log File Responses

Plugins have been successfully deployed

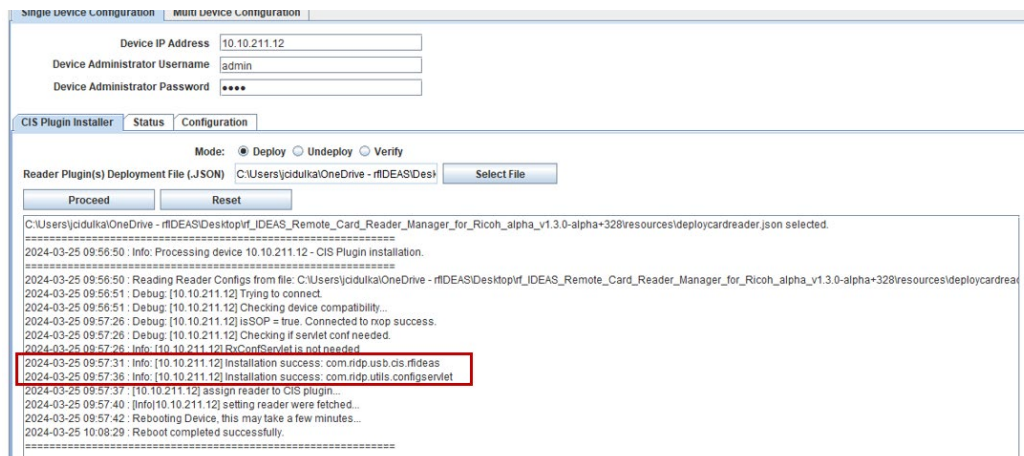

The Remote Card Reader Manager application will automatically reboot the MFP after plugin installation.

Undeploy Function:

- You can Undeploy any plugin file uploaded to the MFP via the rf IDEAS Remote Card Reader Manager for Ricoh application by selecting the “Undeploy” radio button, then clicking the “Select File” button.
- It is not able to Undeploy plugin files installed via WIM or RIM.

5. Configure the rf IDEAS Remote Card Reader Manager for Ricoh


5.1 Single Device Configuration (one rf IDEAS reader connected to Ricoh MFP)

5.1.3 Using Ricoh's Remote Installer Manager (RIM) to install RfIdeasReaderPlugin & RiDPConfigServletInstaller

1. Install RIM
2. Start RIM *NOTE: Don't forget to set the Ricoh MFP admin credentials under File\Environment Setting\Device Communication Settings\Authentication Settings!*
3. Right-click on Device List
4. Click on Add, and Select > Manual Entry to input the IP address of one Ricoh MFP with a Ricoh Card Reader (Manufactured by rf IDEAS)
5. Right click on the Ricoh MFP, Select Offline Operations > Install [2visit course]...> 1. Install [Device]
6. Select RfIdeasReaderPlugin.zip, and click Open
7. Click Yes in the Remote installer Manager Popup window *NOTE: Do not turn the device's power off while the process is being performed*
8. Wait for the process to be completed. *NOTE: you can also access the Ricoh MFP locally (Panel) or via WIM to confirm that the plugin was installed*
9. Repeat steps 5 thru to 8 for RiDPConfigServletInstaller.zip
10. Close RIM

5.1.4 Using WIM to Install RfIdeasReaderPlugin & RiDPConfigServletInstaller

- RfIdeasReaderPlugin.zip v1.1.0 and RiDPConfigServletInstaller.zip v2.02.28 can be installed/removed via WIM using below
1. WIM --> Device Management --> Configuration --> Install.

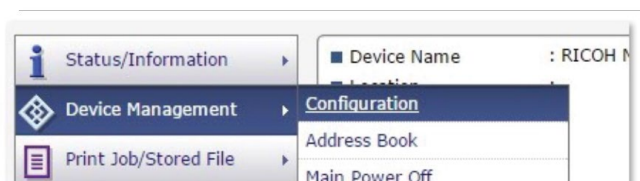

2. Browse to the RfIdeasReaderPlugin-in.zip on your local PC.
3. Click "Display Extended Feature List".
4. Select the Radio button in the Total Applications list.
5. Click "Install" button.
6. Verify that **RfIdeasReaderPlugin.zip v1.1.0** is installed successfully. Information regarding the installed applications can be confirmed from the Extended Feature Setting's Extended Feature Info screen and the Startup Setting screen.
 - 6.1 Click on Extended Feature Info (Startup Setting) from the Extended Feature Settings menu. Up to 4 applications can be displayed at once. Changes are not possible. Changing pages is done by clicking on the index button.
 - 6.2 Click on the properties button of the application that you wish to display information for. Return to the "Extended feature Info" page with the "Back" button.
7. Repeat steps 2-6 above for RiDPConfigServletInstaller.zip

5. Configure the rf IDEAS Remote Card Reader Manager for Ricoh

5.1 Single Device Configuration (one rf IDEAS reader connected to Ricoh MFP)

5.1.4 Using WIM to Install RfIdeasReaderPlugin & RiDPConfigServletInstaller

8. Register the CIS plugin. The CIS plugin needs to be registered to the MFP. In January 2019, Ricoh released a new model generation with G2.5 panels. Therefore, different arrangements of the MFP configuration for CIS plugin registration are described in the following subsections.

8.1 On G3 Panels

- Press "Settings".
- Press "System Settings".
- Press "Network/Interface".
- Press "Control Panel: External Interface Software Settings".
- Select "IC Card Software Settings" and ensure that "Proximity Card Reader" is enabled.
- Select "Proximity Card Reader". This window will ask you to connect your card reader.
- Plug your rf IDEAS Card Reader to the left or back of the SOP panel.
- A dialog will be shown that your card reader was registered.
- Click "OK".
- The "Proximity Card Reader Settings" page will display as follows: Please verify that Vendor ID: "0c27" and Product ID "ToDo" are set. In addition, the "Auth." checkbox must be enabled.

8.2 On G2.5 Panels

- On the Home Screen of the SOP click "User Tools".
- Select "Screen Features".
- Scroll to the bottom of the list and select "Screen device settings".
- External Interface Software Settings.
- Select "IC Card Reader" and ensure that "Proximity Card Reader" is enabled.
- Select "Proximity Card Reader Settings". This window will ask you to connect your card reader.
- Plug your RF ideas Card Reader to the right side of the SOP panel. (You may need to remove the bracket first).
- If the cabling is unclear, please refer to the "Service Manual" of the specific Ricoh MFP for more detailed instructions.
- The "Proximity Card Reader Settings" page will display as follows: Please verify that Vendor ID: "0c27" and Product ID "3BFA" (alternatively 3CFA) are set.
- In addition, the "Auth." checkbox must be enabled. Click "Ok".
- Use the "OK" and "back" button to return to home screen.
- Reboot the device.

8.3 On G2.5 Panels with ACT 1.2s

- Press "System Settings".
- Press "Network/Interface".
- Press "External Interface Software Settings".
- Select "Proximity Card Reader".
- Press "Proximity Card Reader Software Settings"
- Plug the card reader into the tablet.
- A "Toast" message pops up "The card reader has been registered". This message will disappear after a few seconds.
- Enable checkbox Authentication to "Active".
- Select as Software to use "RfIdeasReaderPlug-in".
- Press "OK".
- Go back to home screen.
- Reboot the MFD.

8.4 On G2 Panels

- On the Home Screen of the SOP click "User Tools".
- Select "Screen Features".
- Scroll to the bottom of the list and select "Screen device settings".
- ICard/Bluetooth Software Settings.
- Select "IC Card Software Settings" and ensure that "Proximity Card Reader" is enabled.
- Select "Proximity Card Reader Settings". This window will ask you to connect your card reader. Plug your rf IDEAS Card Reader to the right side of the SOP panel.
- A dialog will be shown that your card reader was registered.
- Click "OK".
- The "Proximity Card Reader Settings" page will display as follows: Please verify that Vendor ID: "0c27" and Product ID "ToDo" are set. In addition, the "Auth." checkbox must be enabled.

5. Configure the rf IDEAS Remote Card Reader Manager for Ricoh

5.1 Single Device Configuration (one rf IDEAS reader connected to Ricoh MFP)

5.1.5 Checking reader status in Single Device Configuration

- Click on the Status tab
- Click on the "Get Status" button

Log File Responses

Successful Results

The screenshot displays the software interface for configuring a Ricoh MFP. It features two main tabs: "Single Device Configuration" (selected) and "Multi Device Configuration". Under "Single Device Configuration", there are three input fields: "Device IP Address" (10.10.211.12), "Device Administrator Username" (admin), and "Device Administrator Password" (masked with dots). Below these fields are three sub-tabs: "CIS Plugin Installer", "Status" (selected), and "Configuration". The "Status" sub-tab contains a "Get Status" button. Below the button, a log window shows the following text:

```
2024-03-25 10:16:36
Connecting to & Checking status of rf IDEAS reader@Ricoh MFP with IP Address=10.10.211.12
Reader status = RemoteCardReaderStatus [cisName=com.ridp.usb.cis.rfideas, pluginId=1667760129, stateCode=ATTACHED, manufacturer=RfIdeas, model=PcProx, firmware=, lastFwChange=, configuration=,
Request sent to rf IDEAS reader@Ricoh MFP with IP Address= 10.10.211.12 processed successfully.
Reader(=RfIdeas, PcProx, ...)@Ricoh MFP with IP Address= 10.10.211.12
```

5. Configure the rf IDEAS Remote Card Reader Manager for Ricoh

5.1 Single Device Configuration (one rf IDEAS reader connected to Ricoh MFP)


5.1.6 Upload Secure .HWG+ file

Configure reader card types, reader settings and data formatting.


- Click on the "Configuration" tab
- Click the arrow next to "Choose File Type to Upload" and select .HWG+(secure)
- Click on the "Select File" button
- Choose the Secure .HWG+ file you would like to send to the reader, and then click "Open".

NOTE: the current version of RCRM does not allow you send to Secure .HWG+ and Secure Blob .INI files at the same time. This is a feature we plan to release in the future.

- You will see the Configuration File settings below

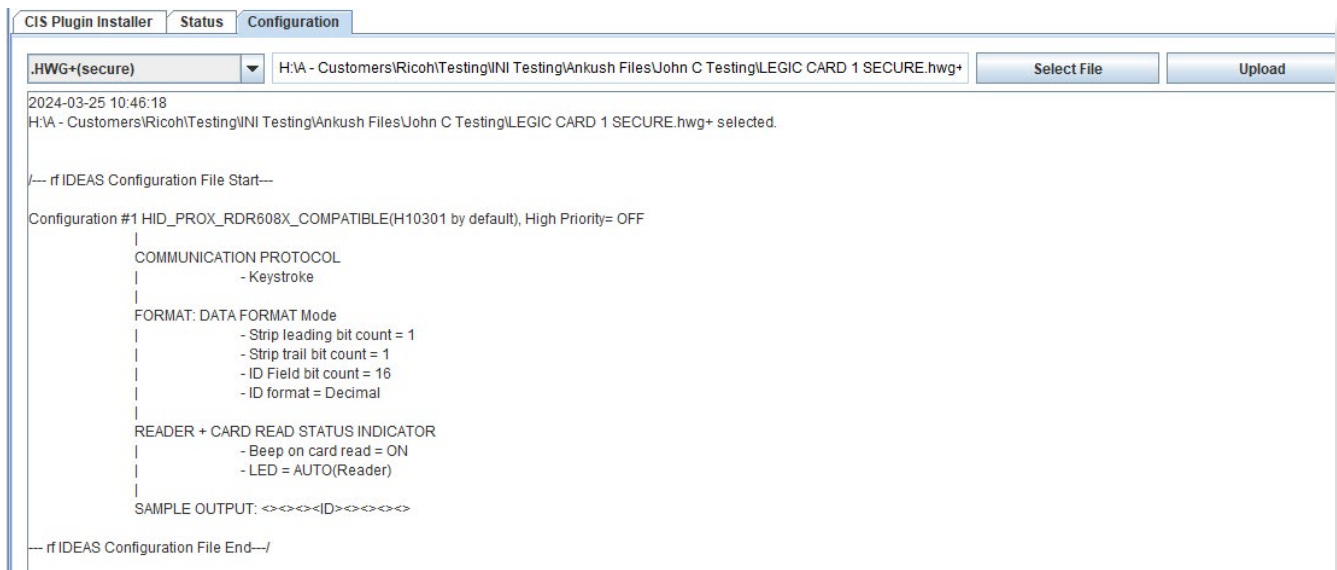

- Click the "Upload" button
- Choose "Yes" when ready to proceed with configuring a single rf IDEAS reader.

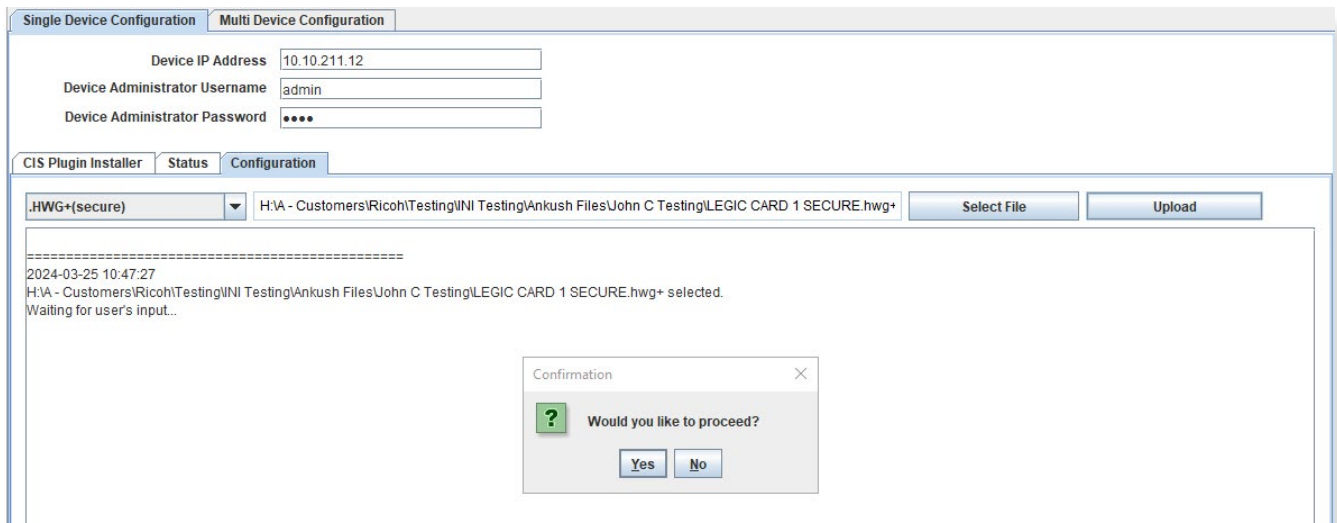


5. Configure the rf IDEAS Remote Card Reader Manager for Ricoh

5.1 Single Device Configuration (one rf IDEAS reader connected to Ricoh MFP)

5.1.6 Upload Secure .HWG+ file

Log File Responses

Successful Results

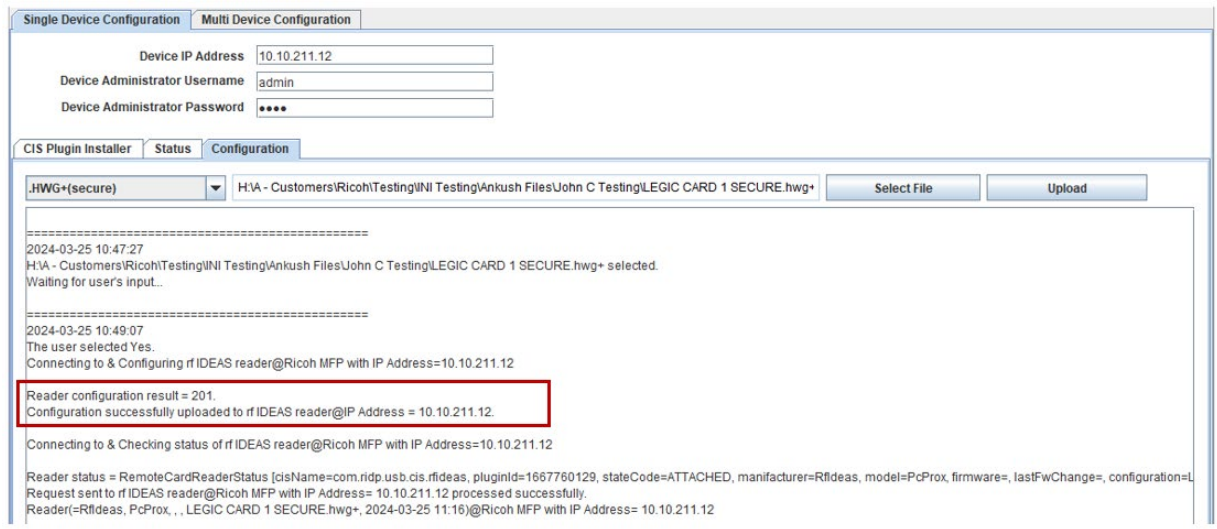


5.1.7 Upload Secure Blob *.ini file

Configure Smartcard secure reader settings and security keys (sent to SAM card) for Legic and MIFARE Smartcards.

*Note: If you are updating both Secure Blob *.INI and Secure .HWG+ files, **you must update the Secure Blob *.INI before updating the Secure .HWG+ file.***

- Click on the “Configuration” tab
- Click the arrow next to “Choose File Type to Upload”, and select .INI(Blob*, secure)
- Navigate to the appropriate Secure Blob *.INI file for the customer, and then click “Open”
- You will see the Configuration File settings below

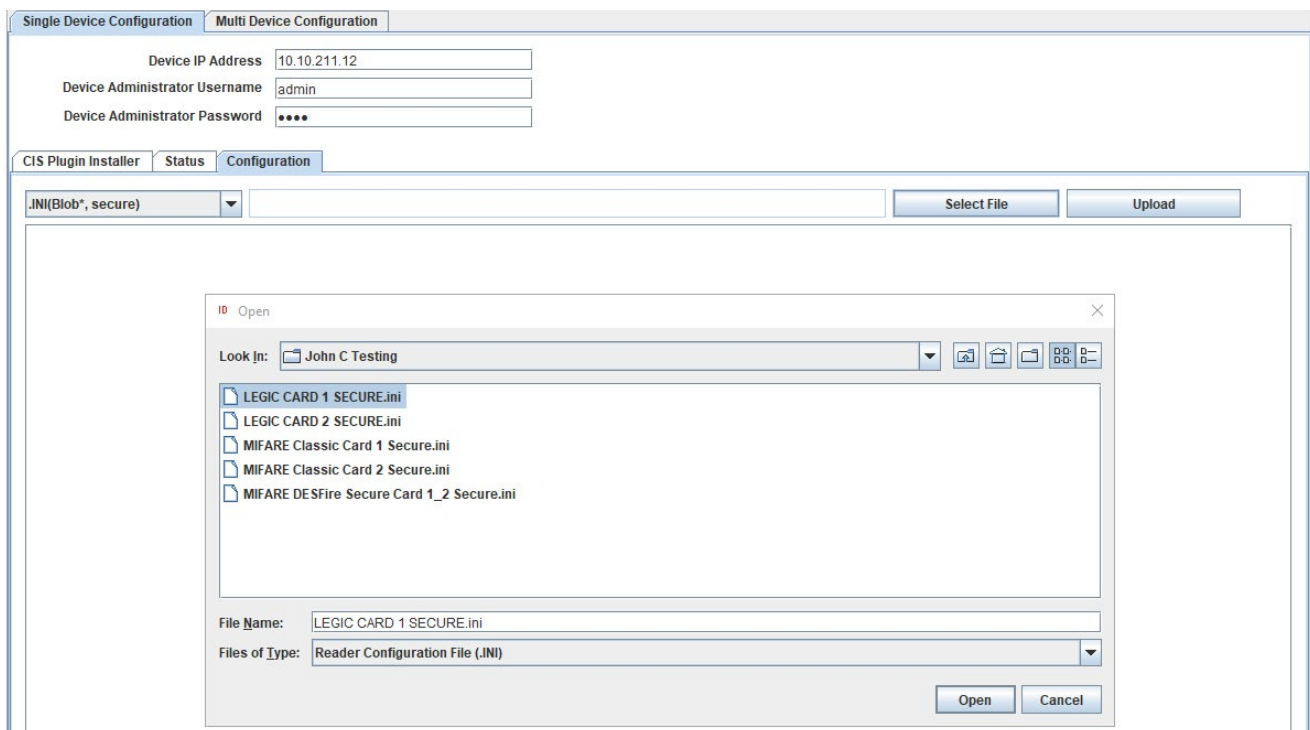


5. Configure the rf IDEAS Remote Card Reader Manager for Ricoh

5.1 Single Device Configuration (one rf IDEAS reader connected to Ricoh MFP)


5.1.7 Upload Secure Blob *.ini file

- Click the “Upload” button
- Choose “Yes” when ready to proceed with configuring a single rf IDEAS reader.

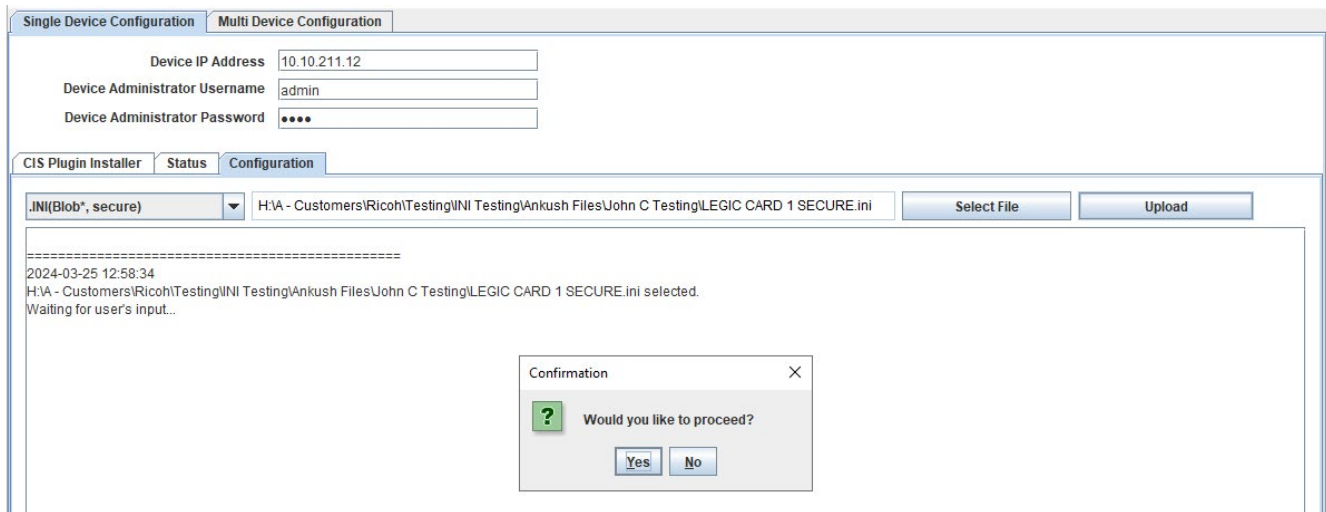

Log File Responses

Successful Results

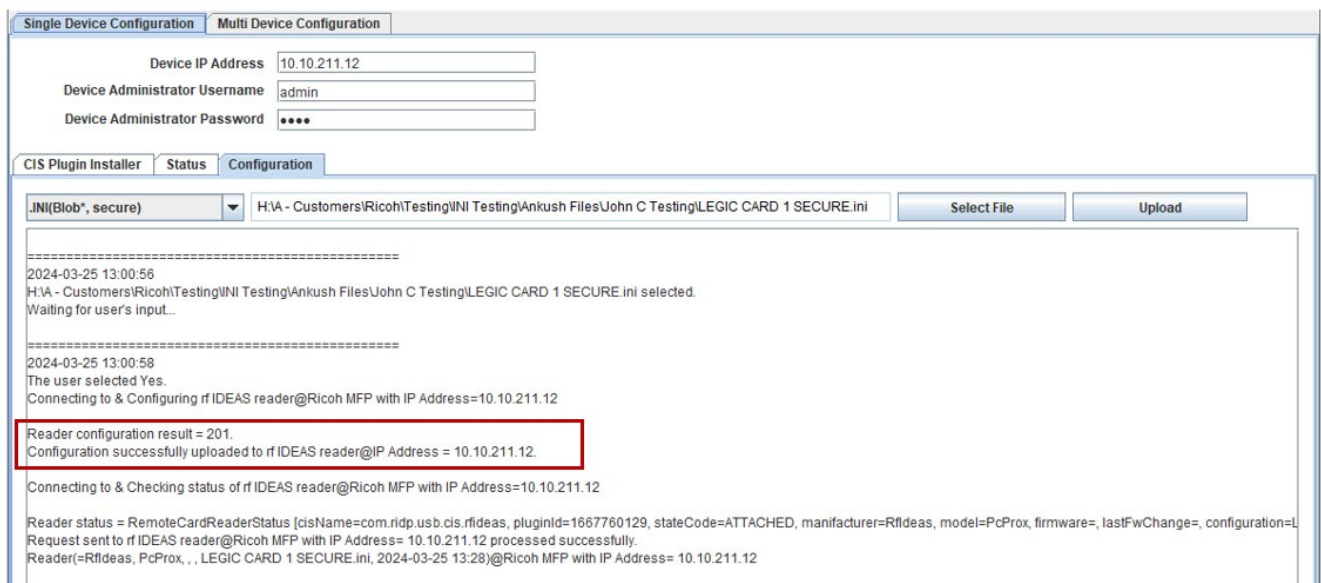


5. Configure the rf IDEAS Remote Card Reader Manager for Ricoh

5.1 Single Device Configuration (one rf IDEAS reader connected to Ricoh MFP)


5.1.8 Upload a Secure EN.hex file

Loading .hex firmware file into reader

- Click on the "Configuration" tab
- Click the arrow next to "Choose File Type to Upload" and select .hex secure file
- Click on the "Select File" button
- Choose the EN.hex file you would like to send to the reader, and then click "Open".
- You will see the selected file below with the path.

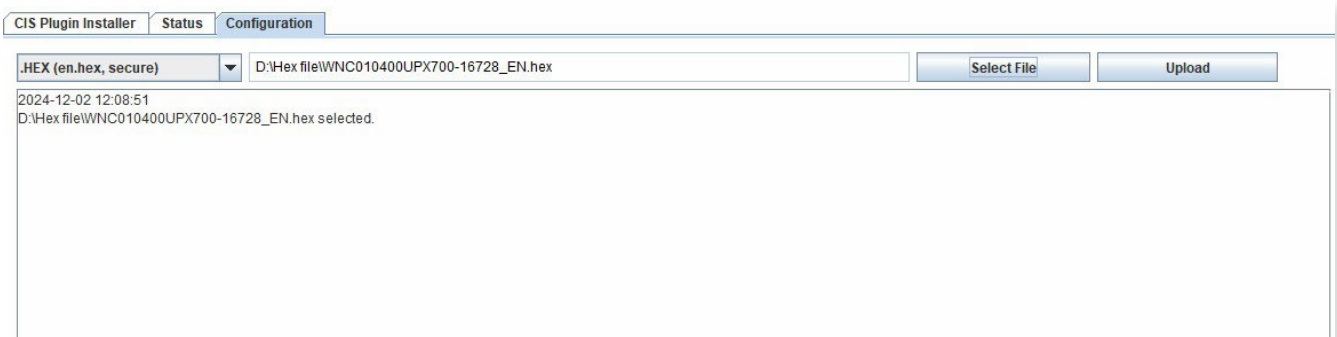

- Click the "Upload" button
- Choose "Yes" when ready to proceed with configuring a single rf IDEAS reader.

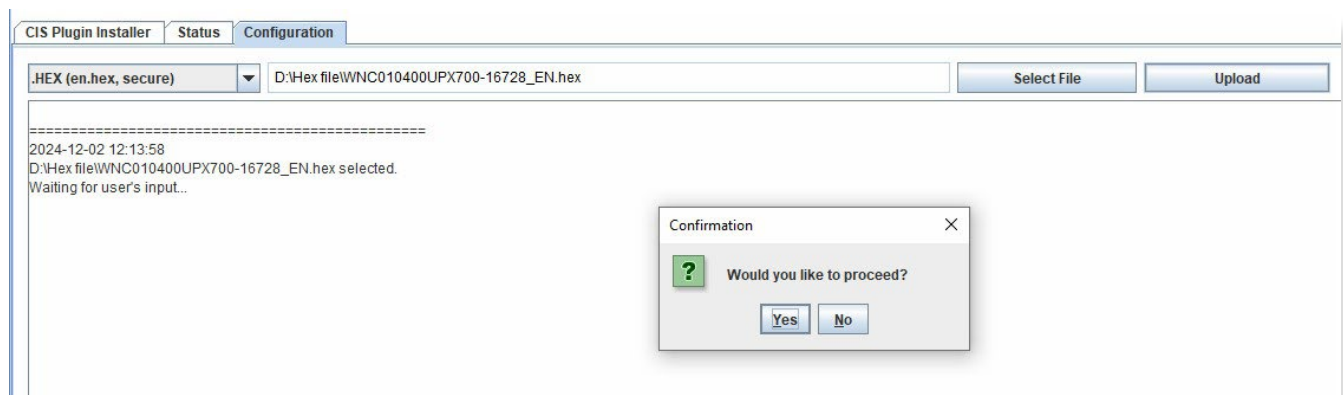

Once firmware upgrade has started then "Firmware update is still in progress" message will display on screen until complete. Re-start the same process if there is an interruption.

5. Configure the rf IDEAS Remote Card Reader Manager for Ricoh


5.1 Single Device Configuration (one rf IDEAS reader connected to Ricoh MFP)

5.1.9 Upload a Secure BLE .hwg+ file


Configure reader card types, reader settings and data formatting for mobile Bluetooth reader.

NOTE: same steps apply for a BLE settings and BLE key file.

- Click on the “Configuration” tab
- Click the arrow next to “Choose File Type to Upload” and select .HWG+ (secure BLE)
- Click on the “Select File” button
- Choose the Secure BLE .HWG+ file you would like to send to the reader, and then click “Open”.

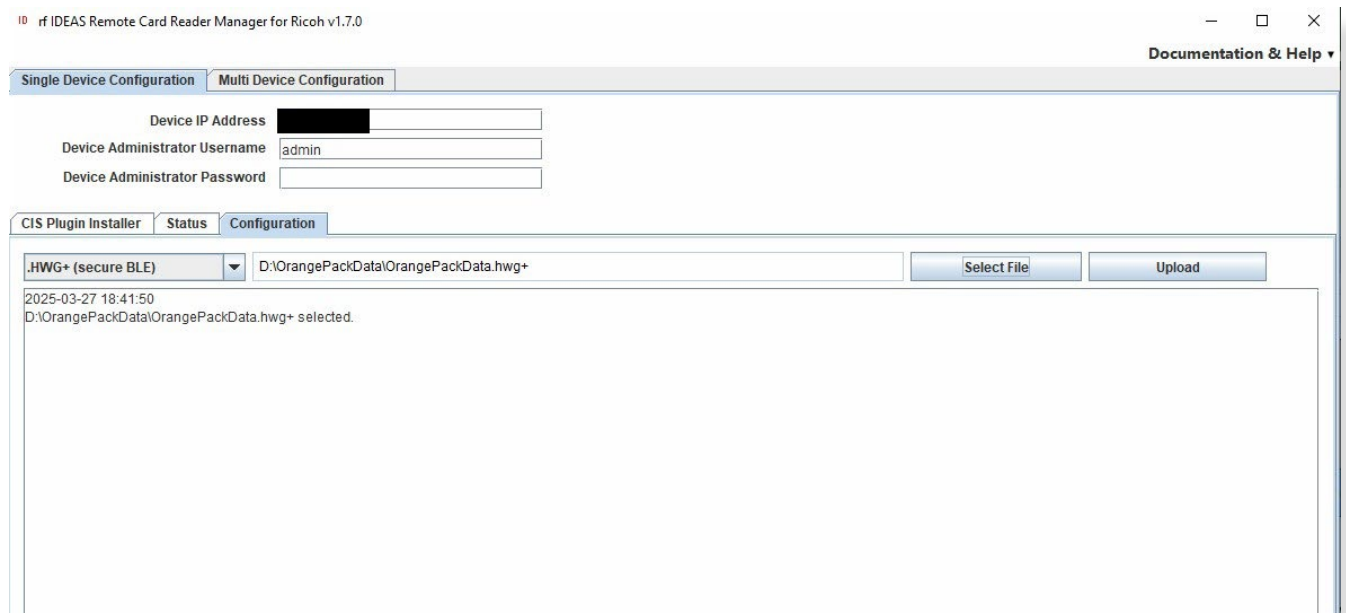

- Click the “Upload” button
- Choose “Yes” when ready to proceed with configuring a single rf IDEAS reader.
- Log File Responses for Successful Results:

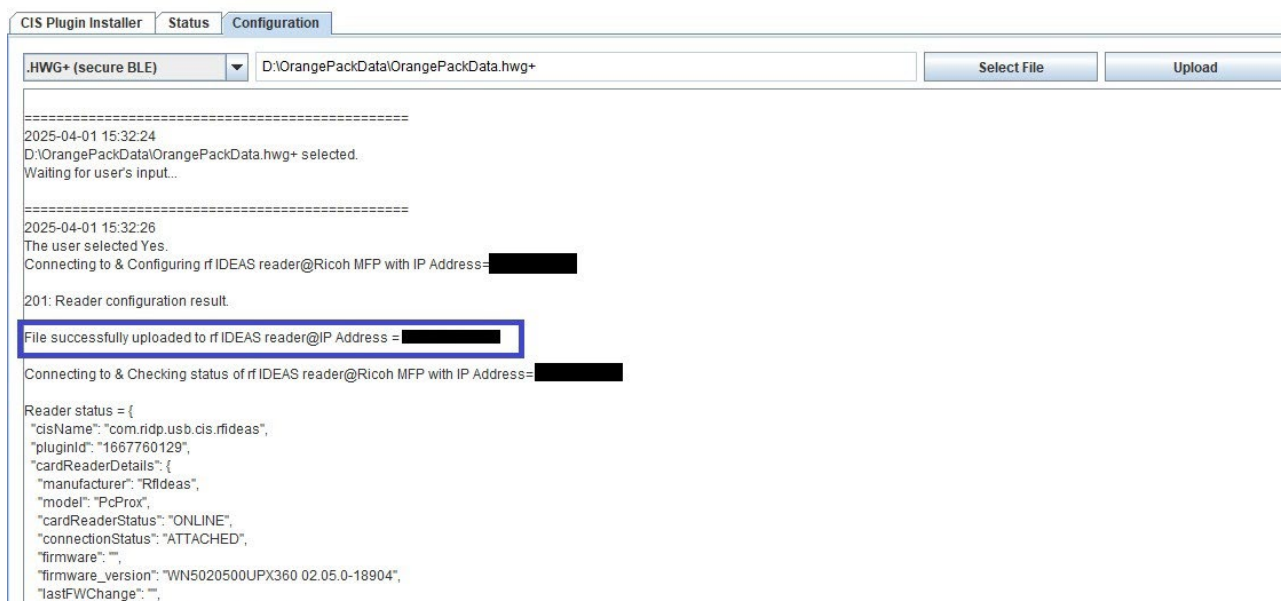


5. Configure the rf IDEAS Remote Card Reader Manager for Ricoh

5.1 Single Device Configuration (one rf IDEAS reader connected to Ricoh MFP)


5.1.10 Upload Onefile.zip

Loading Onefile.zip file into reader:

- Click on the "Configuration" tab
- Click the arrow next to "Choose File Type to Upload" and select .Zip (One File)
- Click on the "Select File" button
- Choose the onefile.zip file you would like to send to the reader, and then click "Open".
- You will see the selected file below with the path.

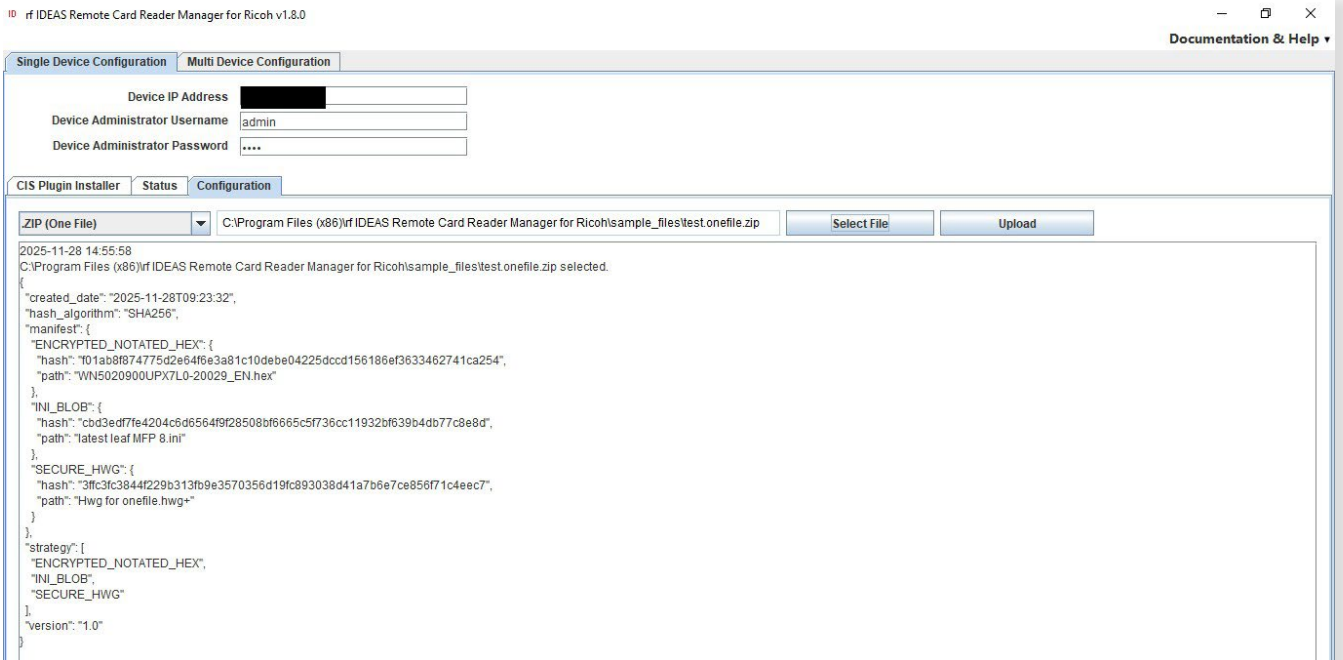

- Click on Upload Button.
- Choose "Yes" when ready to proceed with configuring a single rf IDEAS reader with multiple files via a One File.

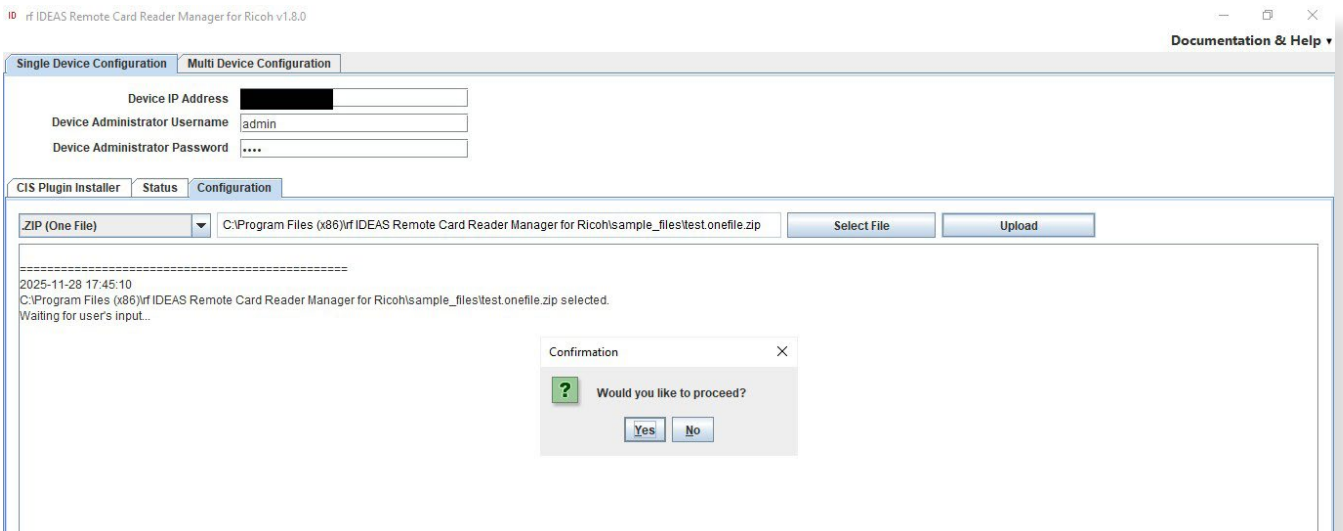

5. Configure the rf IDEAS Remote Card Reader Manager for Ricoh

5.2 Multi-Device / Fleet Configuration

Note: If reader and VID/PID is changing, then follow the below steps for CIS Plugin installer.
 (For other applications like Streamline or CloudStream, the Plugin and VID PID may not be correct by default. Please see documentation of those tools for how to upload rf IDEAS plugin or set correct VID PID.)

Steps to change VID/PID:

- Check the reader VID/PID and if it is changing, update the VID/PID in .json file and re-install CIS Plugin (using “Deploy”)
- Example: if VID should be 0C27 and PID should be 3B4C, then under deploycardreader.json file, edit to:


```

    "cis_plugin_settings":{
        "class":"KSR",
        "package_name":"com.ridp.usb.cis.rfideas",
        "name":"pcProx Card Reader",
        "vendor_id":"0C27",
        "product_id":"3B4C"
    },
    
```


- Save the file and use that file while performing CIS Plugin Installation (“Deploy”)

5.2.1 Login & Verify that CIS Plugin is Installed

- Click on the “Multi Device Configuration” tab
- Enter the Admin credentials (Username and/or Password) for the target MFPs (= MFPs onto which the rf IDEAS reader is connected to)
- Click on “Select File” to load the .CSV containing all the target MFPs

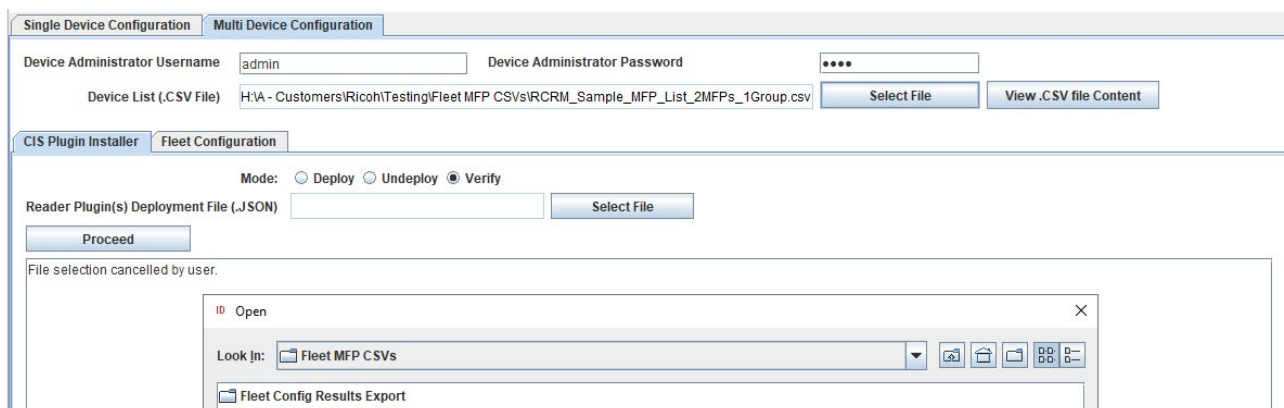

- Select your fleet .csv, and click “Open”
- Click on the “View .CSV file Content” button to review the list of target MFPs

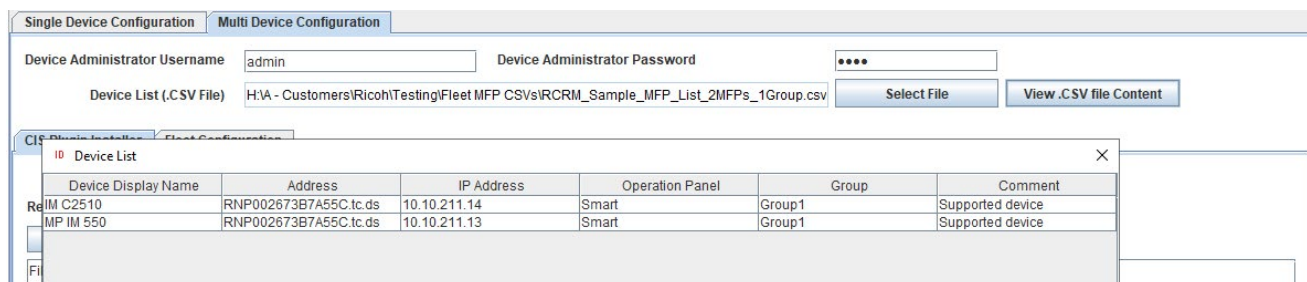


5. Configure the rf IDEAS Remote Card Reader Manager for Ricoh

5.2 Multi-Device / Fleet Configuration

5.2.1 Login & Verify that CIS Plugin is Installed

- Click on the “CIS Plugin Installer” tab
- Set the CIS Plugin Installer mode to “Verify”
- Click on the “Select” file button to load the rf IDEAS plugin deployment .json file
- Select rf IDEAS Remote Card Reader Manager for Ricoh\resources\deploycardreader.json, and click Open

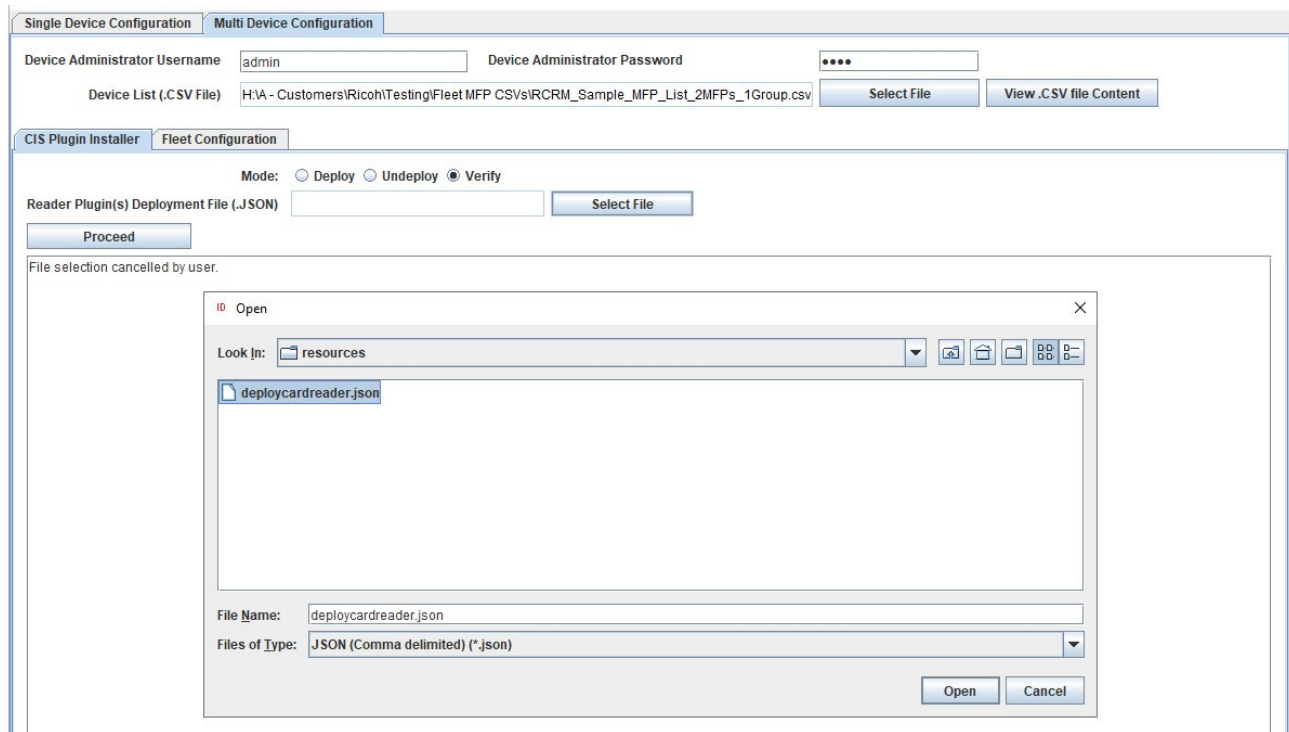


- Click “Proceed”

5. Configure the rf IDEAS Remote Card Reader Manager for Ricoh


5.2 Multi-Device / Fleet Configuration

5.2.1 Login & Verify that CIS Plugin is Installed


- Click "Yes" to start rf IDEAS reader CIS plugin(s) installation on the Ricoh MFP

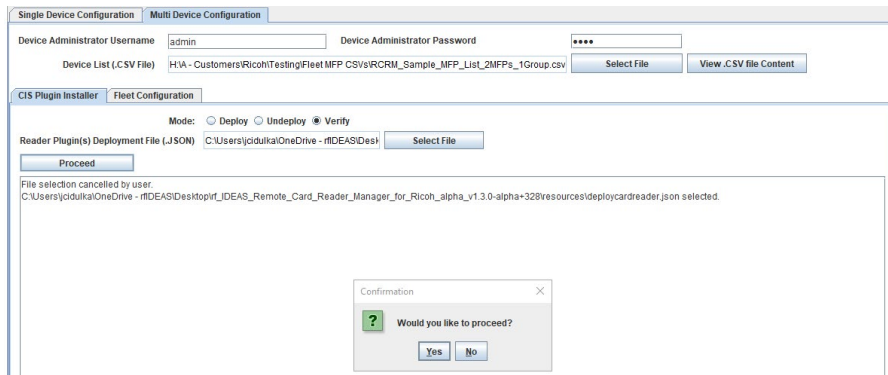

Log File Responses
Plugins are installed on MFPs

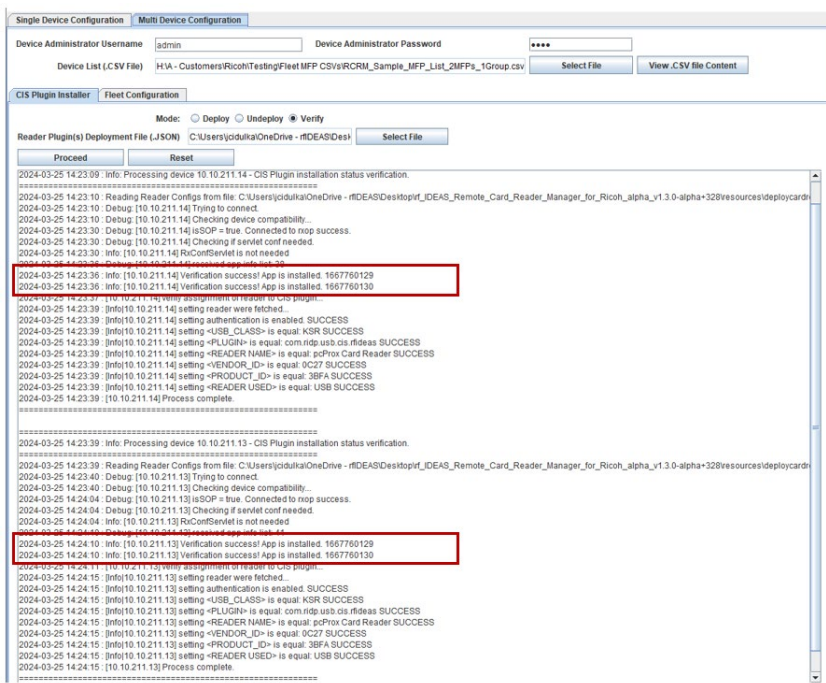

Plugins are not installed on MFPs

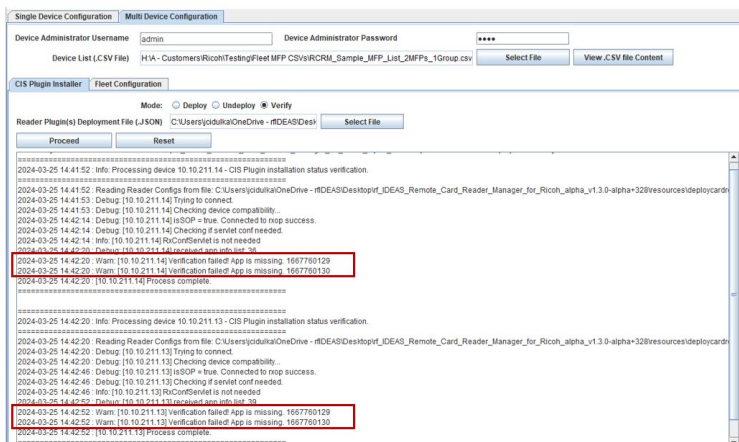


5. Configure the rf IDEAS Remote Card Reader Manager for Ricoh

5.2 Multi-Device / Fleet Configuration

5.2.2 If rf IDEAS Plugin is not Installed


- If the rf IDEAS plugins are not installed, please set the CIS Plugin Installer 's mode to "Deploy"
- Click on the "Select File" button to load the rf IDEAS plugin deployment .json file
- Select rf IDEAS Remote Card Reader Manager for Ricoh\resources\deploycardreader.json, and click Open

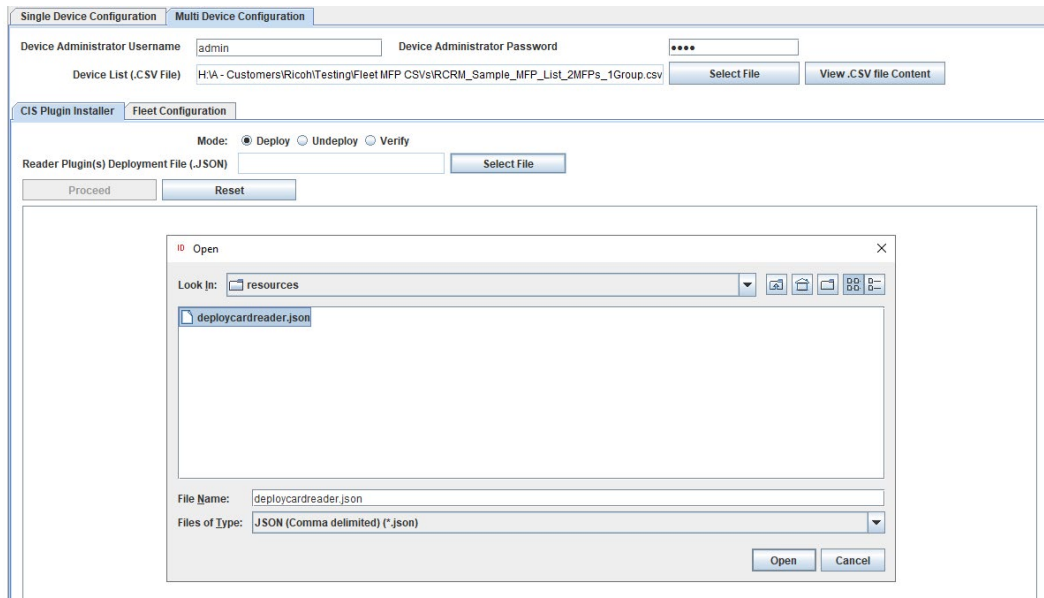

- After loading the .json file click the "Proceed" button
- Click on "Yes" for the rf IDEAS CIS Plugin(s) to be installed on the target Ricoh MFPs

Log File Responses

Plugins have been successfully deployed to MFPs

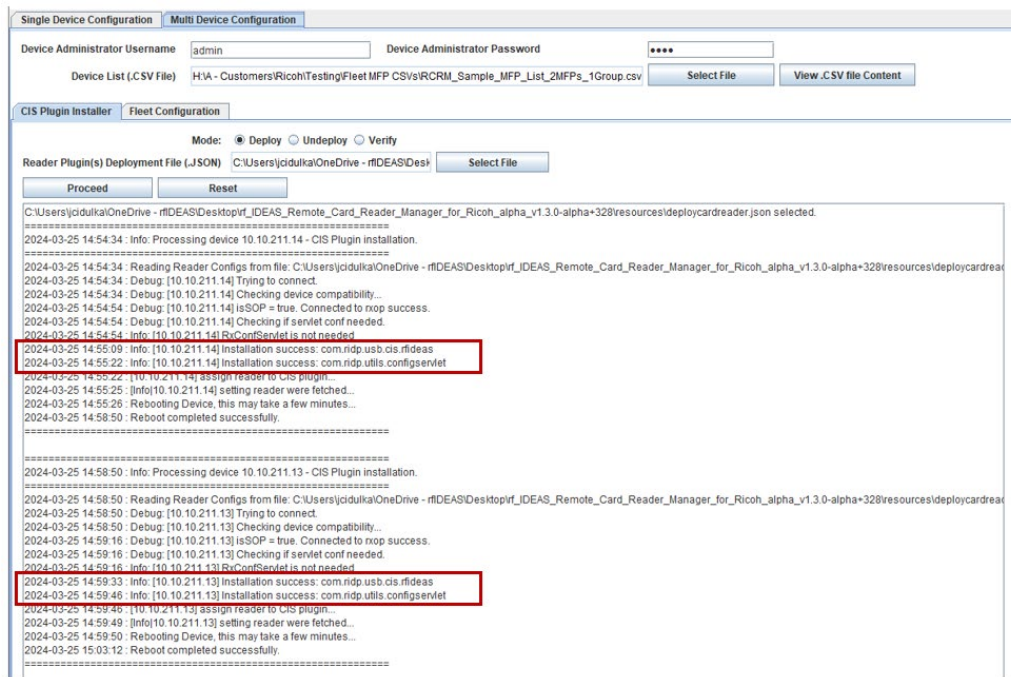

The Remote Card Reader Manager application will automatically reboot the MFPs after plugin installation.

5. Configure the rf IDEAS Remote Card Reader Manager for Ricoh

5.2 Multi-Device / Fleet Configuration

5.2.2 If rf IDEAS Plugin is not Installed

Undeploy Function:

- You can Undeploy any plugin file uploaded to the MFP via the rf IDEAS Remote Card Reader Manager for Ricoh application by selecting the "Undeploy" radio button, then clicking the "Select File" button.
- It is not able to Undeploy plugin files installed via WIM or RIM.

5.2.3 Using Ricoh's Remote Installer Manager (RIM) to install RfIdeasReaderPlugin & RiDPConfigServletInstaller

1. Install RIM
2. Start RIM *NOTE: Don't forget to set the admin credentials under File\Environment Setting\Device Communication Settings\Authentication Settings!*
3. Right-click on Device List
4. Click on Add, and Select > Specify File to load .CSV containing multiple MFP(s)
5. Right - click on MFP(s), Select Offline Operations > Install [2visit course]...> 1. Install [Device]
6. Select RfIdeasReaderPlugin.zip, and click Open
7. Click yes in the Remote installer Manager Popup window *NOTE: Do not turn the device's power off while the process is being performed.*
8. Wait for the process to be completed. *NOTE: you can also access the MFP locally (Panel) or via WIM to confirm that the plugin was installed*
9. Repeat steps 5 thru to 8 for RiDPConfigServletInstaller.zip
10. Close RIM


5. Configure the rf IDEAS Remote Card Reader Manager for Ricoh

5.2 Multi-Device / Fleet Configuration

5.2.4 Select a Secure .HWG+ File for a "Group" of Readers

The Fleet Configuration function allows you to configure multiple readers, with the same Secure .HWG+ files, simultaneously.

- Click on the Fleet Configuration tab
- Click the arrow next to "Choose File Type to Upload" and select .HWG+(secure)
- Click the "Select Reader Configuration File" button in the task table to load in your Secure .HWG+ file

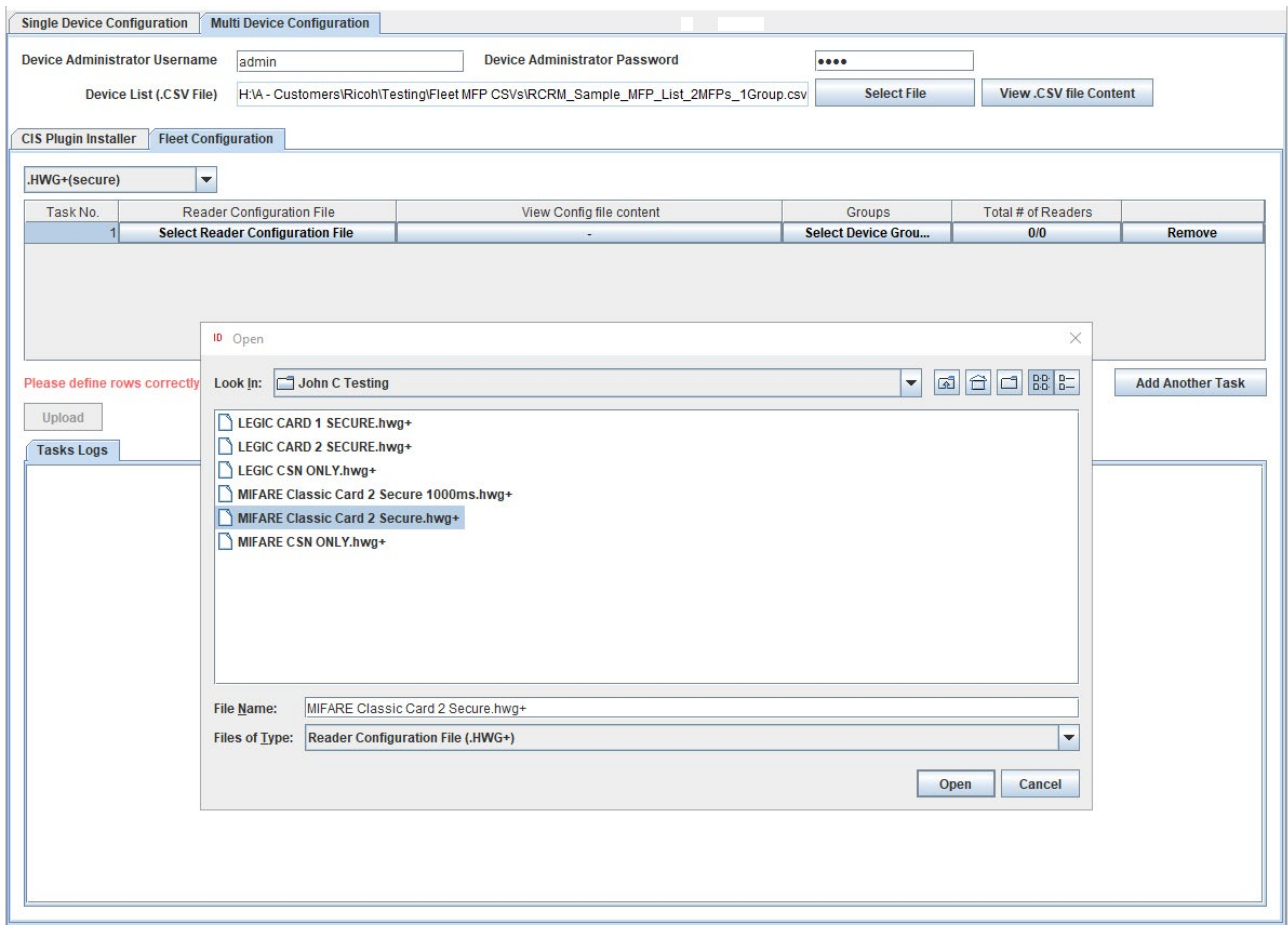

- Choose the Secure .HWG+ file you would like to send to the readers, and then click "Open"
- Your selected Secure file appears in the task bar
- Click on the "View Config file content" button to view configuration settings


5. Configure the rf IDEAS Remote Card Reader Manager for Ricoh

5.2 Multi-Device / Fleet Configuration

5.2.4 Select a Secure .HWG+ File for a "Group" of Readers

NOTE: the current version does not allow you send to Secure .HWG+, Secure Blob *.INI and EN.hex files at the same time. Please check back for this feature in the future.

- Click on the "Select Device Group(s)" button to choose the MFP that the above chosen Secure .HWG+ file should be applied to.

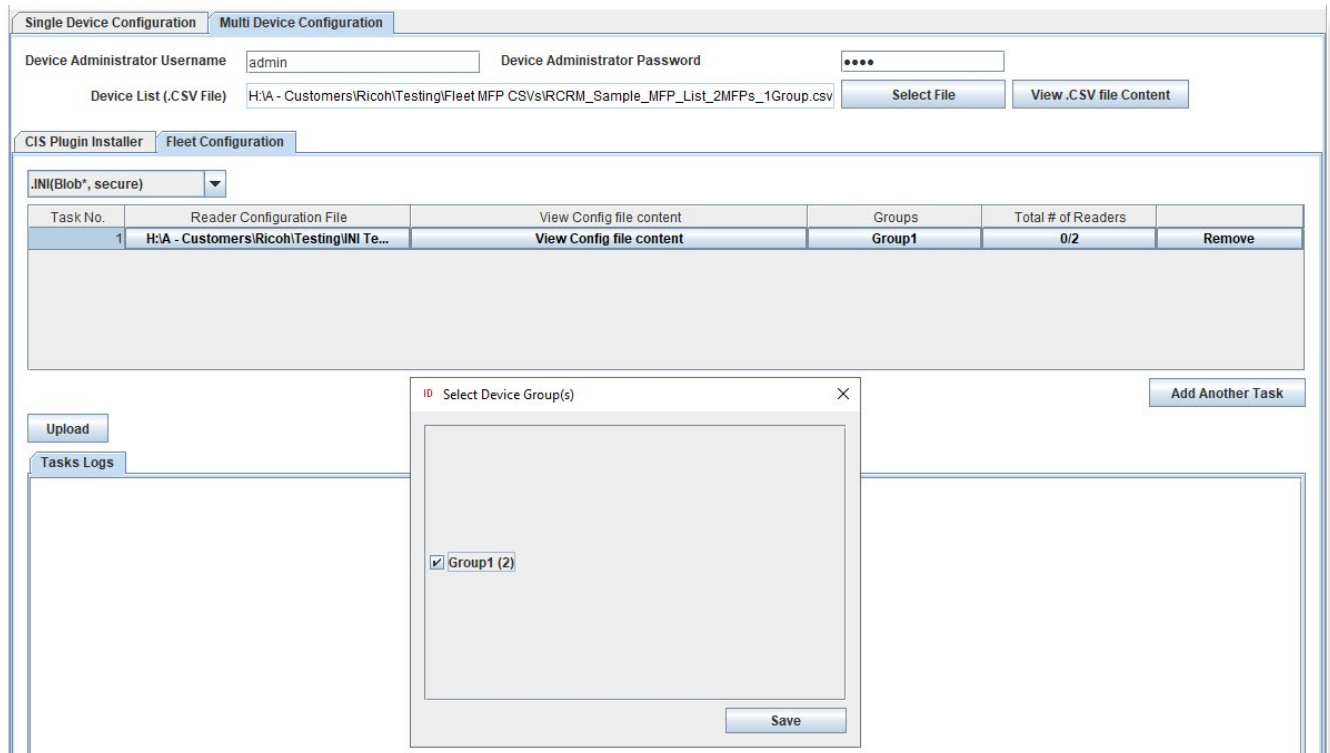

- With the RCRM, you have the ability to send different Secure .HWG+ files to different cohorts of readers simultaneously, by creating additional groups in the MFP CSV file.
- It is recommended that you begin using the utility with a single group (Group 1).
- Then as you become more proficient, you have the option to send multiple Secure .HWG+ files to multiple MFPs by adding additional Groups in the MFP CSV file.

NOTE: the current version of RCRM does not allow you send to Secure .HWG+ and Secure. Blob *.INI files at the same time. This is a feature we plan to release in the future.

- Click the "Upload" button to upload the HWG+ files to the targeted MFPs

5. Configure the rf IDEAS Remote Card Reader Manager for Ricoh

5.2 Multi-Device / Fleet Configuration

5.2.4 Select a Secure .HWG+ File for a "Group" of Readers

Log File Responses

Single Device Configuration | **Multi Device Configuration**

Device Administrator Username: Device Administrator Password:

Device List (.CSV File):

CIS Plugin Installer | **Fleet Configuration**

.HWG+(secure)

Task No.	Reader Configuration File	View Config file content	Groups	Total # of Readers
1	H:\A - Customers\Richo\Testing\INI Testing...	<input type="button" value="View Config file content"/>	Group1	2/2

Upload

Tasks Logs

```

=====
2024-03-25 15:40:36
Config: H:\A - Customers\Richo\Testing\INI Testing\Ankush Files\John C Testing\MIFARE Classic Card 2 Secure.hwg+
Groups: Group1
Total # of reader to be configured:: 2
=====
2024-03-25 15:40:36
Connecting to & Configuring rf IDEAS reader@Ricoh MFP with IP Address=10.10.211.14
2024-03-25 15:40:50
Reader configuration result = 201.
Configuration successfully uploaded to rf IDEAS reader@IP Address = 10.10.211.14.

2024-03-25 15:40:55
Connecting to & Checking status of rf IDEAS reader@Ricoh MFP with IP Address=10.10.211.14

Reader status = RemoteCardReaderStatus [cisName=com.ridp.usb.cis.rfideas, pluginId=1667760129, stateCode=ATTACHED, manufacturer=RfIdeas, model=PcProx, firmware=, lastFwChange=, configuratio
Request sent to rf IDEAS reader@Ricoh MFP with IP Address= 10.10.211.14 processed successfully.
Reader=(RfIdeas, PcProx, , MIFARE Classic Card 2 Secure.hwg+, 2024-03-25 15:40:50)@Ricoh MFP with IP Address= 10.10.211.14
=====
2024-03-25 15:40:57
Connecting to & Configuring rf IDEAS reader@Ricoh MFP with IP Address=10.10.211.13
2024-03-25 15:41:13
Reader configuration result = 201.
Configuration successfully uploaded to rf IDEAS reader@IP Address = 10.10.211.13.

2024-03-25 15:41:18
Connecting to & Checking status of rf IDEAS reader@Ricoh MFP with IP Address=10.10.211.13

Reader status = RemoteCardReaderStatus [cisName=com.ridp.usb.cis.rfideas, pluginId=1667760129, stateCode=ATTACHED, manufacturer=RfIdeas, model=PcProx, firmware=, lastFwChange=, configuratio
Request sent to rf IDEAS reader@Ricoh MFP with IP Address= 10.10.211.13 processed successfully.
Reader=(RfIdeas, PcProx, , MIFARE Classic Card 2 Secure.hwg+, 2024-03-25 14:15)@Ricoh MFP with IP Address= 10.10.211.13
=====
2024-03-25 15:41:20
Done...
=====

```

5. Configure the rf IDEAS Remote Card Reader Manager for Ricoh


5.2 Multi-Device / Fleet Configuration

5.2.5 Select a Secure Blob *.INI File for a “Group” of Readers


NOTE: the current version does not allow you send to Secure .HWG+, Secure Blob *.INI and EN.hex files at the same time. Please check back for this feature in the future.

The Fleet Configuration function allows you to configure multiple readers, with the same Secure Blob *.INI files simultaneously. *Note: If you are updating both Secure Blob *.INI and Secure .HWG+ files, **you must update the Secure Blob *.INI before updating the Secure .HWG+ file.***

- Click on the Fleet Configuration tab
- Click the arrow next to “Choose File Type to Upload” and select .INI(Blob*, secure)
- Click the “Select Reader Configuration File” button in the task table to load in your Secure Blob *.INI file
- Choose the Secure Blob *.INI file you would like to send to the readers, and then click “Open”

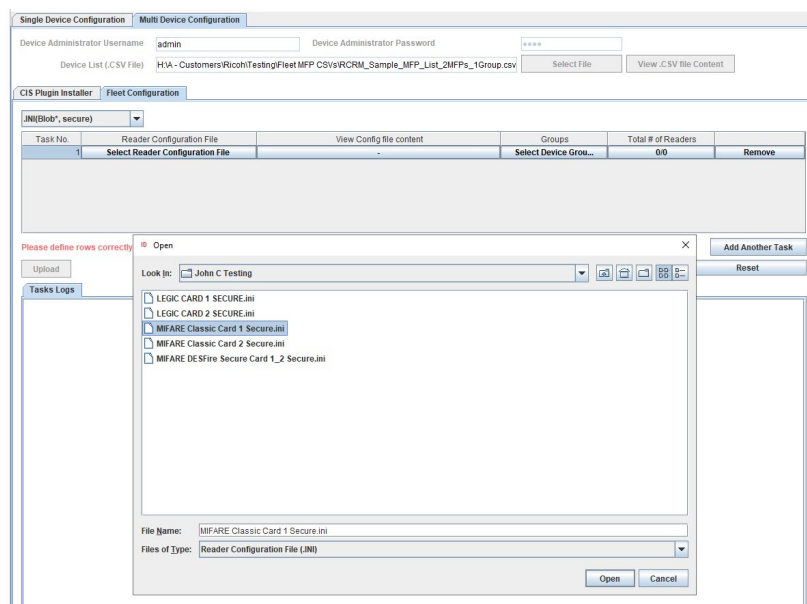

- Your selected Secure Blob *.INI file appears in the task bar
- Click on the “View Config file content” button to view configuration settings
- Click on the “Select Device Group(s)” button to choose the MFPs that the above chosen Secure Blob *.INI file should be applied to.

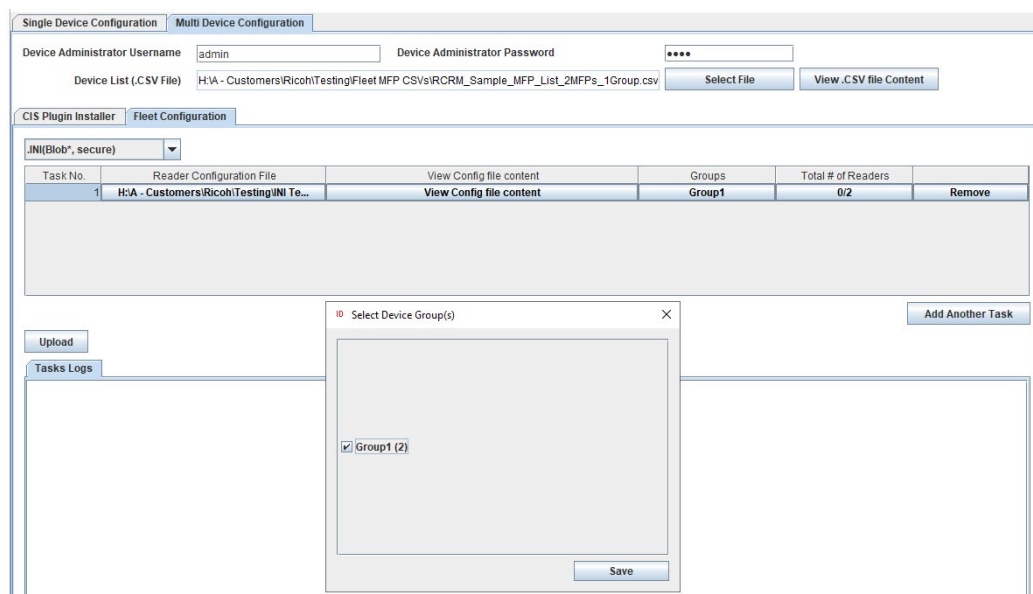

5. Configure the rf IDEAS Remote Card Reader Manager for Ricoh

5.2 Multi-Device / Fleet Configuration

5.2.5 Select a Secure Blob *.INI File for a "Group" of Readers

- With the RCRM, you have the ability to send different Secure Blob *.INI files to different cohorts of readers simultaneously, by creating additional groups in the MFP CSV file.
- It is recommended that you begin using the utility with a single group (Group 1).
- Then as you become more proficient, you have the option to send multiple Secure Blob *.INI files to multiple MFPs by adding additional Groups in the MFP CSV file.

*NOTE: the current version of RCRM does not allow you send to Secure .HWG+ and Secure. Blob *.INI files at the same time. This is a feature we plan release in the future.*

- Click the "Upload" button to upload the Secure Blob *.INI files to the targeted MFPs

Single Device Configuration | **Multi Device Configuration**

Device Administrator Username: Device Administrator Password:

Device List (.CSV File):

CIS Plugin Installer | **Fleet Configuration**

.HWG+(secure) ▼

Task No.	Reader Configuration File	View Config file content	Groups	Total # of Readers
1	H:\A - Customers\Richo\Testing\INI Testing...	View Config file content	Group1	2/2

Upload 100%

Tasks Logs

```

2024-03-25 15:40:36
Config: H:\A - Customers\Richo\Testing\INI Testing\Ankush Files\John C Testing\MIFARE Classic Card 2 Secure.hwg+
Groups: Group1
Total # of reader to be configured: 2
2024-03-25 15:40:36
Connecting to & Configuring rf IDEAS reader@Ricoh MFP with IP Address=10.10.211.14
2024-03-25 15:40:50
Reader configuration result = 201.
Configuration successfully uploaded to rf IDEAS reader@IP Address = 10.10.211.14.
2024-03-25 15:40:55
Connecting to & Checking status of rf IDEAS reader@Ricoh MFP with IP Address=10.10.211.14
Reader status = RemoteCardReaderStatus [cisName=com.ridp.usb.cis.rfideas, pluginId=1667760129, stateCode=ATTACHED, manufacturer=RfIdeas, model=PcProx, firmware=, lastFwChange=, configuratio
Request sent to rf IDEAS reader@Ricoh MFP with IP Address= 10.10.211.14 processed successfully.
Reader(=RfIdeas, PcProx, , MIFARE Classic Card 2 Secure.hwg+, 2024-03-25 15:40)@Ricoh MFP with IP Address= 10.10.211.14
2024-03-25 15:40:57
Connecting to & Configuring rf IDEAS reader@Ricoh MFP with IP Address=10.10.211.13
2024-03-25 15:41:13
Reader configuration result = 201.
Configuration successfully uploaded to rf IDEAS reader@IP Address = 10.10.211.13.
2024-03-25 15:41:18
Connecting to & Checking status of rf IDEAS reader@Ricoh MFP with IP Address=10.10.211.13
Reader status = RemoteCardReaderStatus [cisName=com.ridp.usb.cis.rfideas, pluginId=1667760129, stateCode=ATTACHED, manufacturer=RfIdeas, model=PcProx, firmware=, lastFwChange=, configuratio
Request sent to rf IDEAS reader@Ricoh MFP with IP Address= 10.10.211.13 processed successfully.
Reader(=RfIdeas, PcProx, , MIFARE Classic Card 2 Secure.hwg+, 2024-03-25 14:15)@Ricoh MFP with IP Address= 10.10.211.13
2024-03-25 15:41:20
Done...
    
```

5. Configure the rf IDEAS Remote Card Reader Manager for Ricoh

5.2 Multi-Device / Fleet Configuration

5.2.6 Select a Secure BLE .hwg+ File for a “Group” of Readers


NOTE: the current version does not allow you to send Secure .HWG+, Secure Blob *.INI, BLE .hwg+ and EN.hex files at the same time.

Please check back for this feature in the future.

The Fleet Configuration function allows you to update multiple readers with the same BLE .hwg+ files simultaneously.

NOTE: same steps apply for a BLE settings and BLE key file.

- Click on the Fleet Configuration tab
- Click the arrow next to “Choose File Type to Upload” and select .HWG+ (secure BLE)
- Click the “Select Reader Configuration File” button in the task table to load in your BLE .hwg+ file.
- Choose the BLE .hwg+ file you would like to send to the readers, and then click “Open”

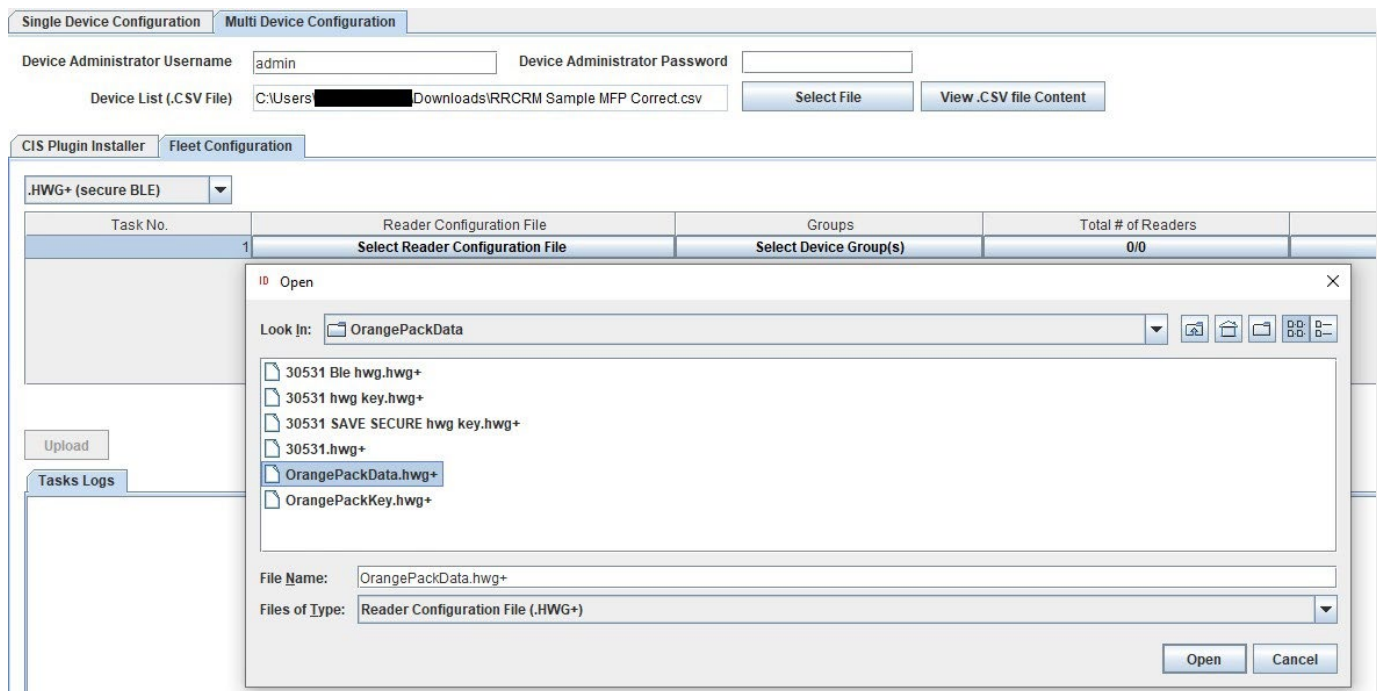


- Your selected BLE .hwg+ file appears in the task bar
- Click on the “Select Device Group(s)” button to choose the MFP that the above chosen BLE .hwg+ file should be applied to.

5. Configure the rf IDEAS Remote Card Reader Manager for Ricoh

5.2 Multi-Device / Fleet Configuration


5.2.6 Select a Secure BLE .hwg+ File for a "Group" of Readers

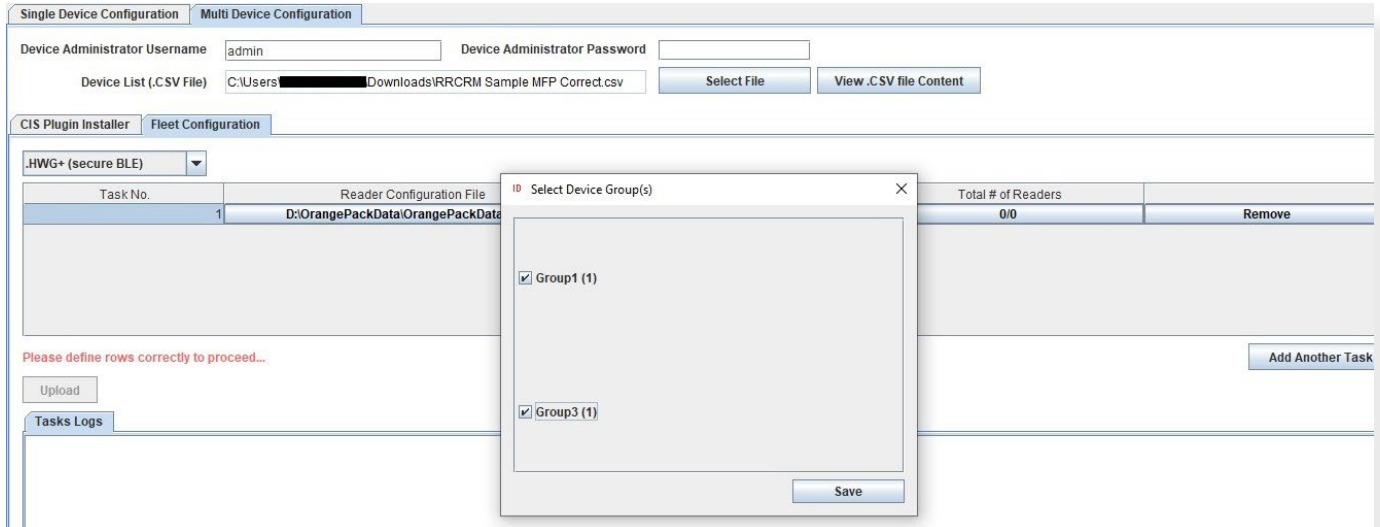

- To send different BLE .hwg+ files to different cohorts of readers simultaneously, create additional groups in the MFP CSV file. Then select "Add Another Task".

NOTE: the current version does not allow you send to Secure .HWG+, BLE .hwg+, Secure Blob *.INI and EN.hex files at the same time. Please check back for this feature in the future.

- Click the "Upload" button to upload the BLE .hwg+ files to the targeted reader.

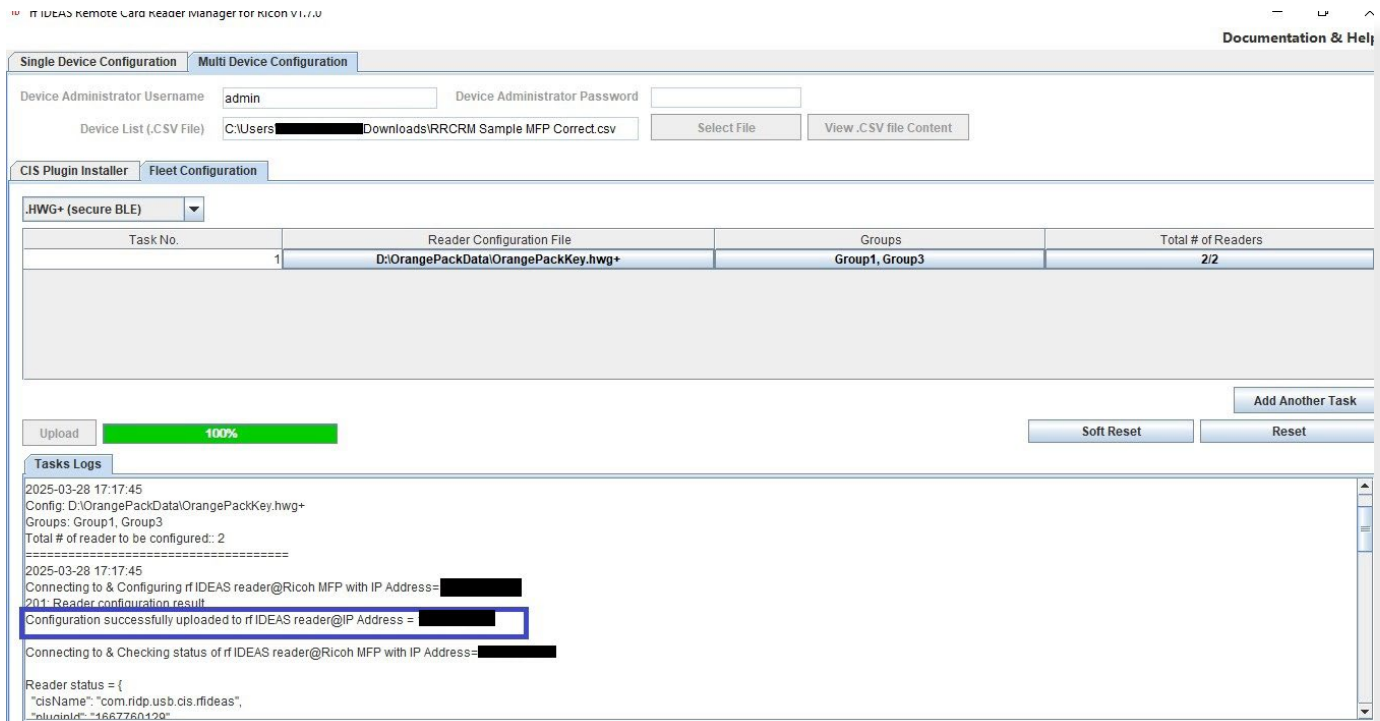

5. Configure the rf IDEAS Remote Card Reader Manager for Ricoh


5.2 Multi-Device / Fleet Configuration

5.2.7 Upload a Secure EN.hex File for a Group of Readers

NOTE: the current version does not allow you send to Secure .HWG+, Secure Blob *.INI and EN.hex files at the same time. Please check back for this feature in the future.

The Fleet Configuration function allows you to update multiple readers with the same EN.hex files simultaneously.

- Click on the Fleet Configuration tab
- Click the arrow next to “Choose File Type to Upload” and select .hex secure file
- Click the “Select Reader Configuration File” button in the task table to load in your EN.hex file

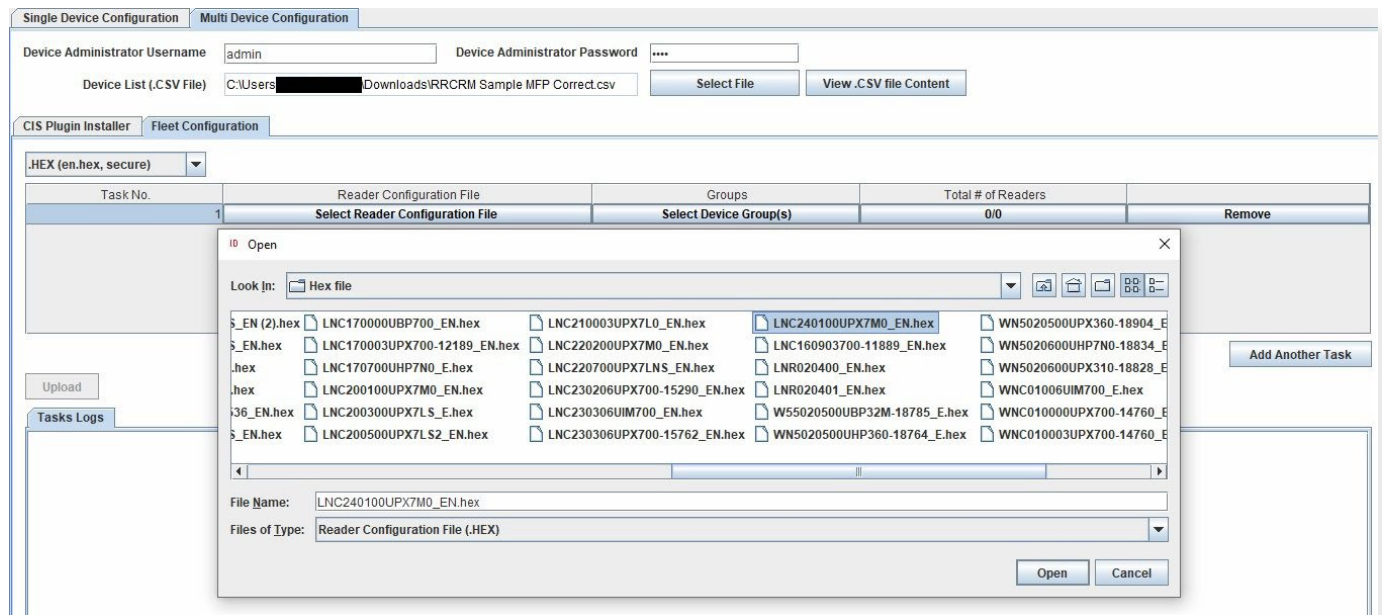


- Choose the EN.hex file you would like to send to the readers, and then click “Open”
- Your selected EN.hex file appears in the task bar
- Click on the “Select Device Group(s)” button to choose the MFP that the above chosen EN.hex file should be applied to.

5. Configure the rf IDEAS Remote Card Reader Manager for Ricoh

5.2 Multi-Device / Fleet Configuration


5.2.7 Upload a Secure EN.hex File for a Group of Readers

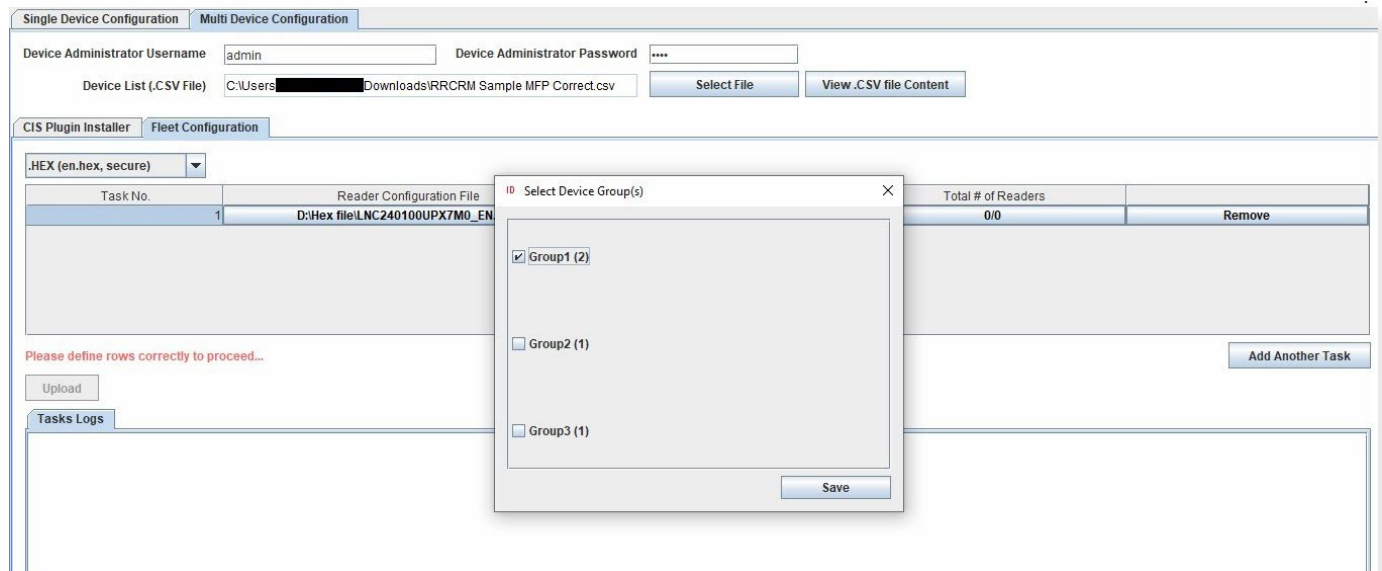

- To send different EN.hex files to different cohorts of readers simultaneously, create additional groups in the MFP CSV file. Then select “Add Another Task”.

NOTE: the current version does not allow you send to Secure .HWG+, Secure Blob *.INI and EN.hex files at the same time. Please check back for this feature in the future.

- Click the “Upload” button to upload the EN.hex files to the targeted reader

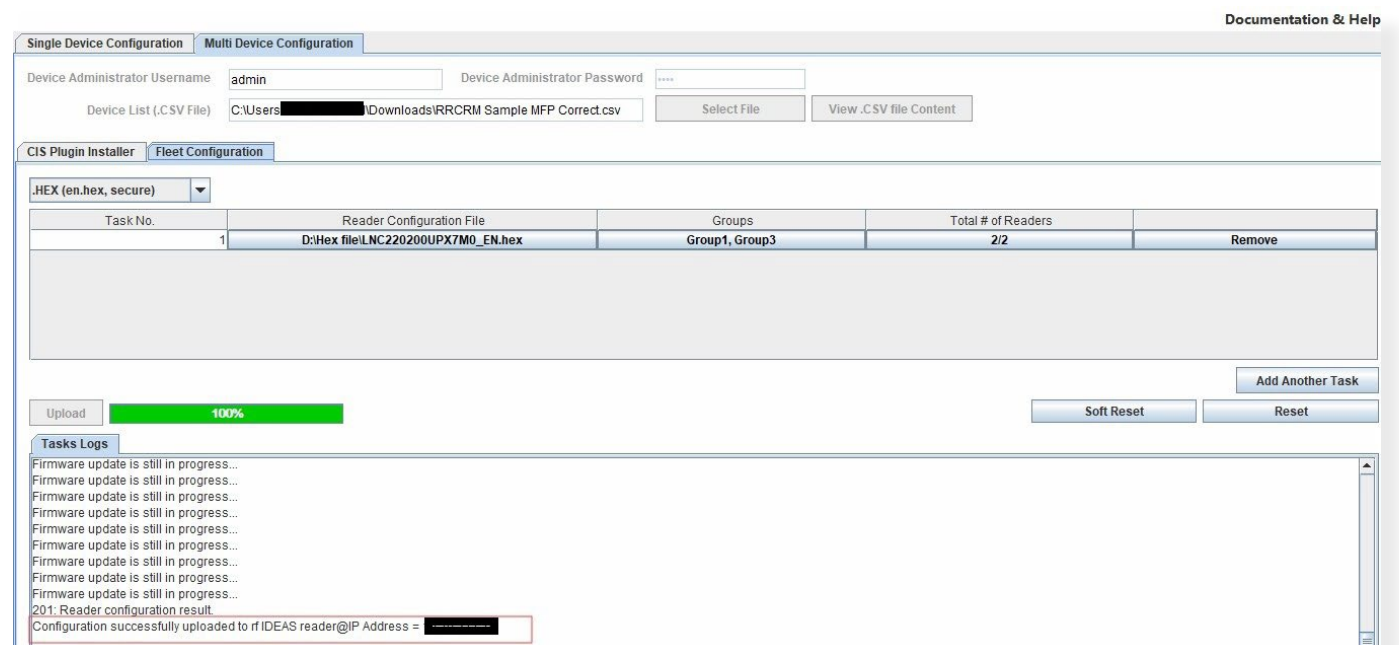


5. Configure the rf IDEAS Remote Card Reader Manager for Ricoh

5.2 Multi-Device / Fleet Configuration


5.2.8 Upload Onfile.zip for a group of readers

The Fleet Configuration function allows you to update multiple readers with the same Onfile.zip files simultaneously.

- Click on the Fleet Configuration tab
- Click the arrow next to “Choose File Type to Upload” and select .Zip (One File)
- Click the “Select Reader Configuration File” button in the task table to load in your onfile.zip file

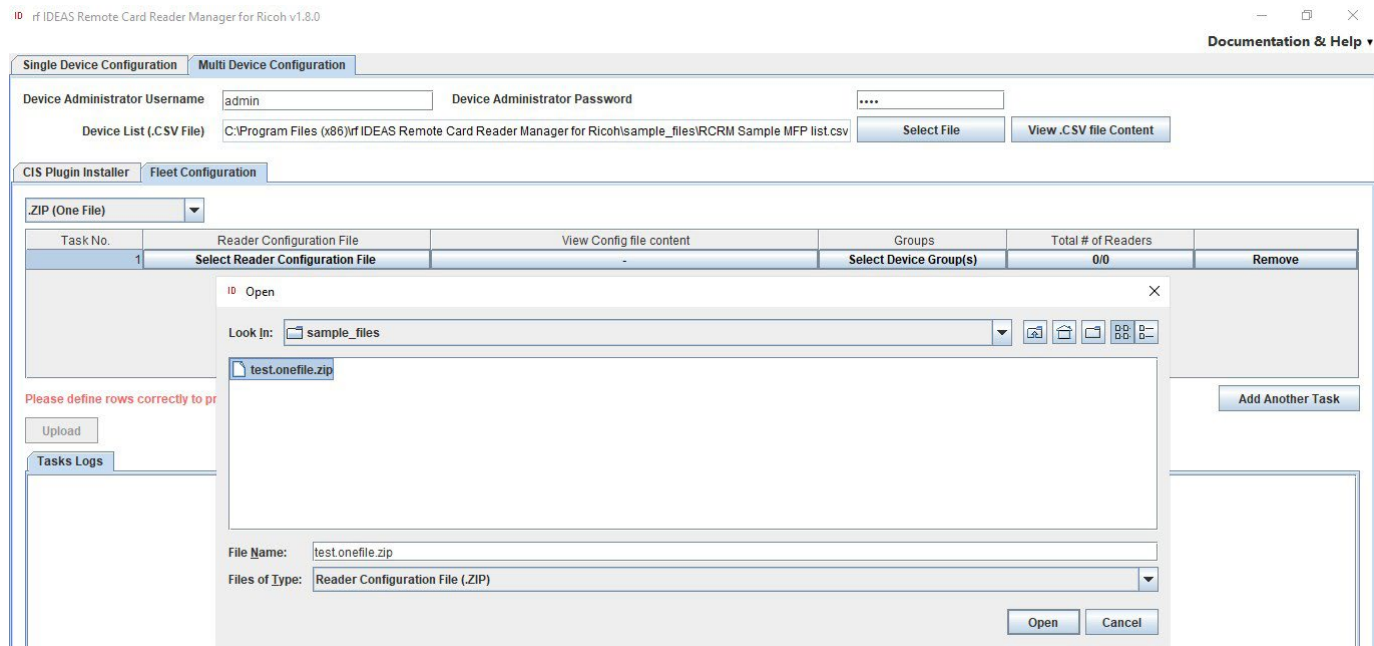

- Choose the onfile.zip file you would like to send to the readers, and then click “Open”
- Your selected onfile.zip file appears in the task bar.
- Click on the “Select Device Group(s)” button to choose the MFP that the above chosen onfile.zip file should be applied to.

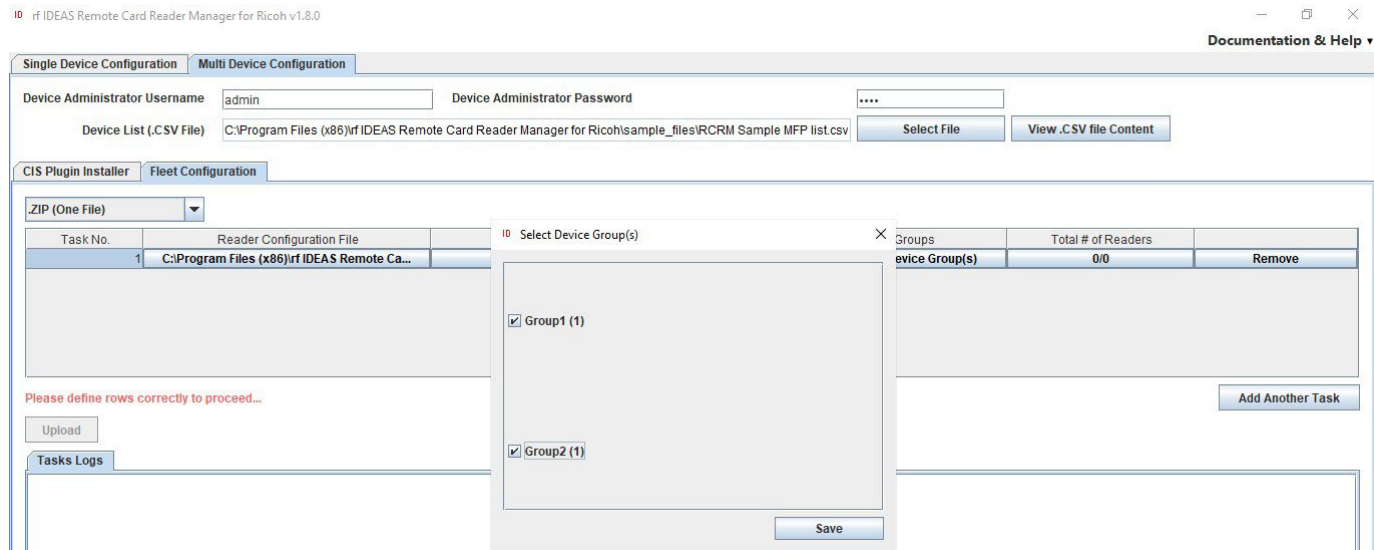

5. Configure the rf IDEAS Remote Card Reader Manager for Ricoh

5.2 Multi-Device / Fleet Configuration

5.2.8 Upload Onefile.zip for a group of readers

- To send different onefile.zip files to different cohorts of readers simultaneously, create additional groups in the MFP CSV file. Then select “Add Another Task”.
- Click the “Upload” button to upload multiple files via a One File to each targeted reader.

rf IDEAS Remote Card Reader Manager for Ricoh v1.8.0 Documentation & Help

Device Administrator Username
 Device Administrator Password

Device List (.CSV File)

Task No.	Reader Configuration File	View Config file content	Groups	Total # of Readers
1	C:\Program Files (x86)\rf IDEAS Remote Card Rea...	View Config file content	Group1	1/1

100%

Tasks Logs

```

firmware update is in progress...
Firmware update is in progress...
Firmware update is in progress...
Firmware update is in progress...
Update for "WN5020900UPX7L0-20029_EN.hex" complete.

Beginning update for "latest leaf MFP 8.ini"
Update for "latest leaf MFP 8.ini" complete.

Beginning update for "Hwg for onefile.hwg+"
Update for "Hwg for onefile.hwg+" complete.

One File update completed successfully.
201: Reader configuration result.
  
```

5. Configure the rf IDEAS Remote Card Reader Manager for Ricoh

5.2 Multi-Device / Fleet Configuration

5.2.9 Export Results from Multi-Device Configuration

- To export results of your fleet configuration, click the button(s) below the “Total # of Readers” table heading.
- Click the “Export” button in the pop-up window.

The screenshot displays the 'Multi Device Configuration' tab in the rf IDEAS software. At the top, there are fields for 'Device Administrator Username' (admin) and 'Device Administrator Password' (masked with dots). Below these is a 'Device List (.CSV File)' field containing the path 'H:\A - Customers\Richo\Testing\Fleet MFP CSVs\RCRM_Sample_MFP_List_2MFPs_1Group.csv', with 'Select File' and 'View .CSV file Content' buttons.

The 'Fleet Configuration' section shows a dropdown menu set to '.INI(Blob*, secure)'. Below it is a table with the following data:

Task No.	Reader Configuration File	View Config file content	Groups	Total # of Readers
1	H:\A - Customers\Richo\Testing\INI Testing...	View Config file content	Group1	2/2

Below the table is a table titled 'ID Programmed MFPs' with columns: Config File, IP Address, Group, Is Processed, Is Successful, and Message. It contains two rows of data, both showing successful configuration for IP addresses 10.10.211.14 and 10.10.211.13.

An 'Export' button is visible in the bottom right corner of the main window. A 'Save' dialog box is open in the foreground, showing the 'Save In' location as 'Test Results'. The 'File Name' field contains 'RCRM_Sample_MFP_List_2MFPs_1Group - Configuration Results' and the 'Files of Type' is set to 'CSV (Comma delimited) (*.csv)'. 'Save' and 'Cancel' buttons are at the bottom of the dialog.

At the bottom left, a log window shows the following entries:

```

2024-03-25 17:53:12 Connecting to & Configuring rf
2024-03-25 17:53:26 Reader configuration result = 201. Configuration successfully up
2024-03-25 17:53:31 Connecting to & Checking stat
Reader status = RemoteCard
Request sent to rf IDEAS read
Reader(=RfIdeas, PcProx, , M
2024-03-25 17:53:33 Done
    
```

6. Have Additional Questions/Need Assistance?

Tech Support

[Click here](#) to submit a help request to rf IDEAS Tech Support.

Troubleshooting FAQs

[Click here](#) access Troubleshooting FAQs.

rf IDEAS Knowledge Base

<https://knowledgebase.rfideas.com/>



rf IDEAS® and WAVE ID® are registered trademarks of rf IDEAS, Inc. Trademarks not belonging to rf IDEAS are property of their respective companies.

©2026 rf IDEAS, Inc. All rights reserved. Products are subject to change without notice.

425 N. Martingale Road, Suite 1680 Schaumburg, IL 60173 // Toll Free: (866) 439-4884 //
Voice: (847) 870-1723 Fax: (847) 483-1129 // Email: sales@rfIDEAS.com // rfIDEAS.com